


SWOON

DIVAN BED


DOUBLE
KING
SUPER KING




MOVIE INSTRUCTION

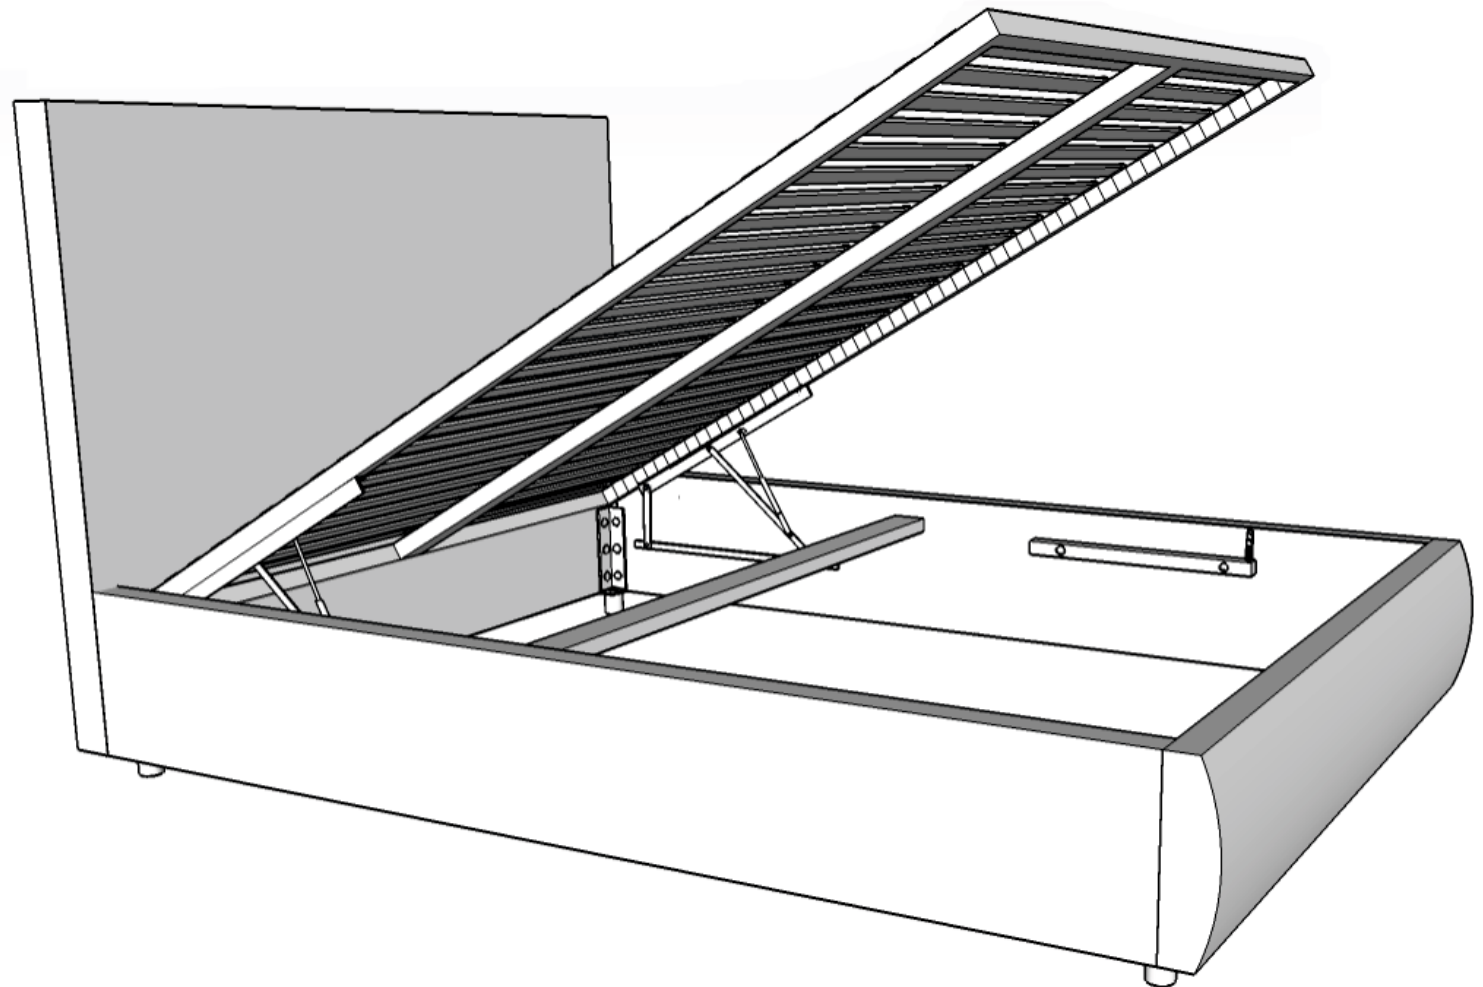


BOX C

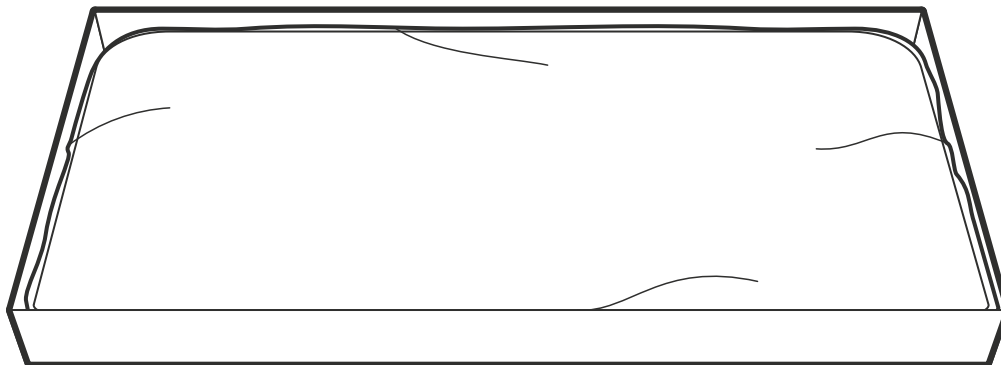

BOX B (FRAME)

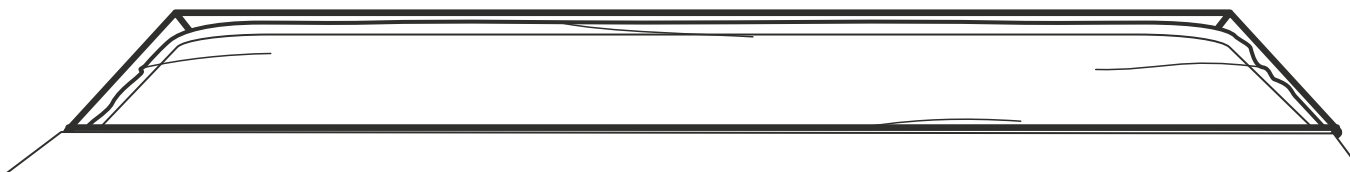

BOX A

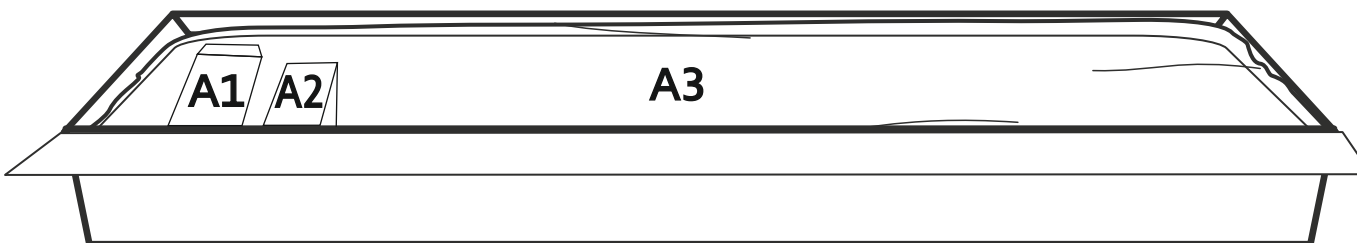


IMPORTANT !

1. Do not fully tighten the screws when connecting the individual components. Do this when all elements are connected
2. Be careful not to soil the upholstered parts of the bed. All bolts are coated with grease. Make sure that the surface you are working on is clean
3. For the **KIPLING** model, the ears and headrest mounting accessories are located in the headrest. To take them out, you need to unzip the zipper.

ATTENTION!

The frame without the mattress rises to the top

NEEDED

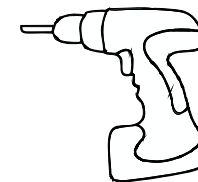


screwdriver



2 x
two persons

BOX A


PACKAGE A1




12pcs
M8 30mm



1 pcs
Imbus M5

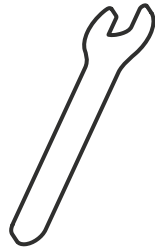


1 pcs
Wrench
„10“

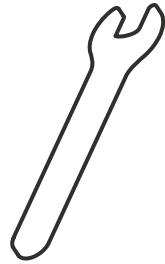

1 pcs
Wrench
„13“



9 pcs
Felt

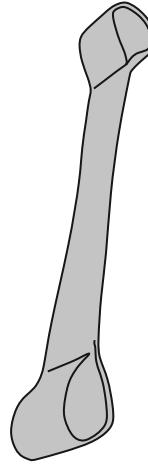


1pcs
Belt
(jack handle)

PACKAGE A2




4 pcs
Legs and screws


PACKAGE A3

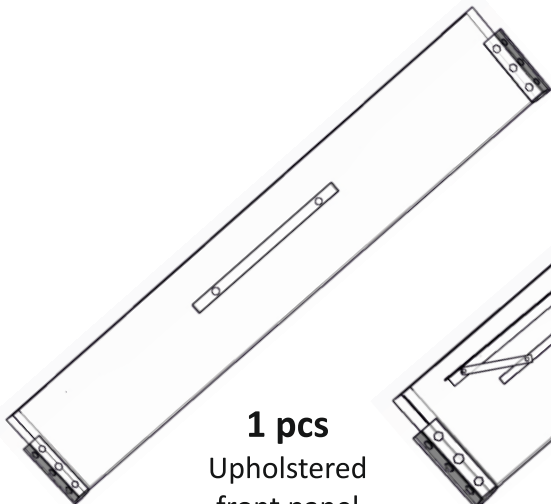

1 pcs
Upholstered
front panel

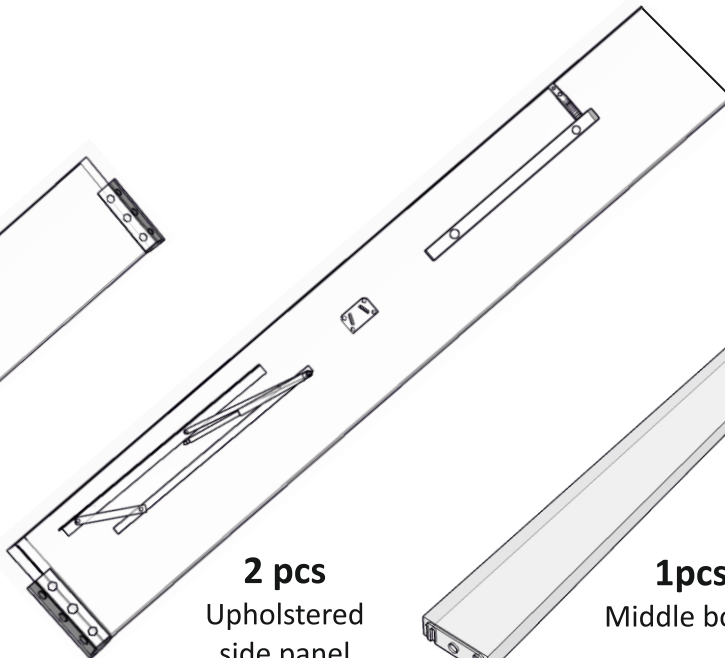


2 pcs
Upholstered
side panel

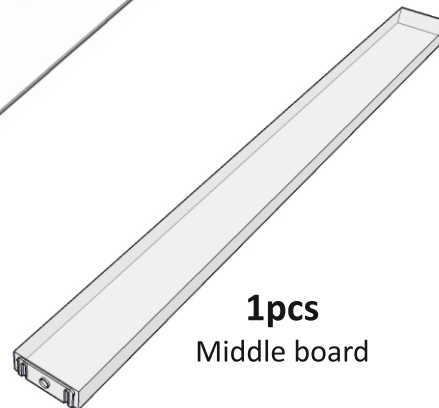


1pcs
Middle board

BOX B



8 pcs
Wood screw
25 mm



4 pcs
M8 50 mm



4 pcs
M8 55 mm




4 pcs
Bolt washer
M8



8 pcs
Nut M8



4 pcs
Self - counter
nut M6

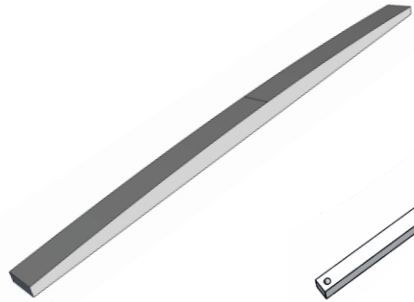


52 pcs
(king/Super King)
48 pcs
(double)
Wooden slats




2 pcs
Metal A



1 pcs
Metal B

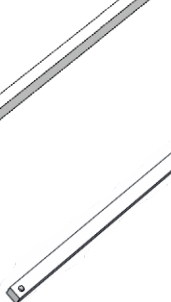


2 pcs
Metal C




2 pcs
Metal holder
for Metal C



4 pcs
Plastic
corners

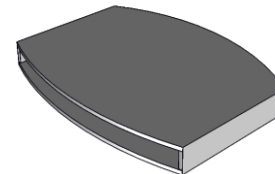

26 pcs
(king/superking)
24 pcs
(double)
Plastic caps for
middle metal bar B

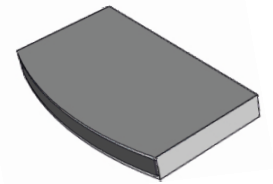


52 pcs
(king/superking)
48 pcs
(double)
Plastic caps
for metal bar A


BOX B

Put the frame parts as on the drawing below



- 1 Connect all 4 plastic corner with the metal rail.
Before connect tie around the center metal belt for lifting the frame

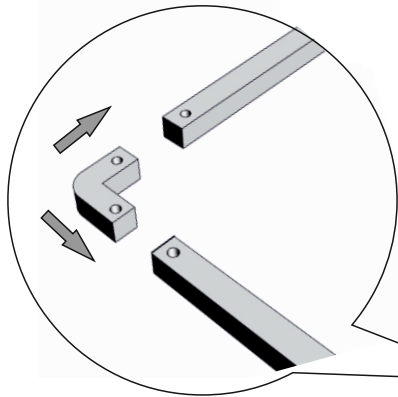

- 2 Screw with wood screws 25 mm

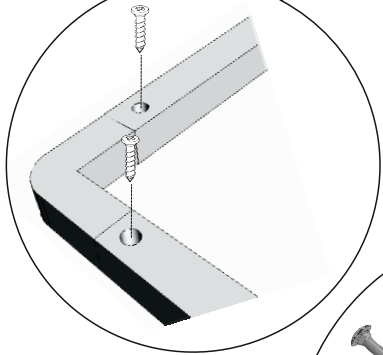


- 3 Fasten the middle rail with M8 50 mm screws, from the other side put the nut M8

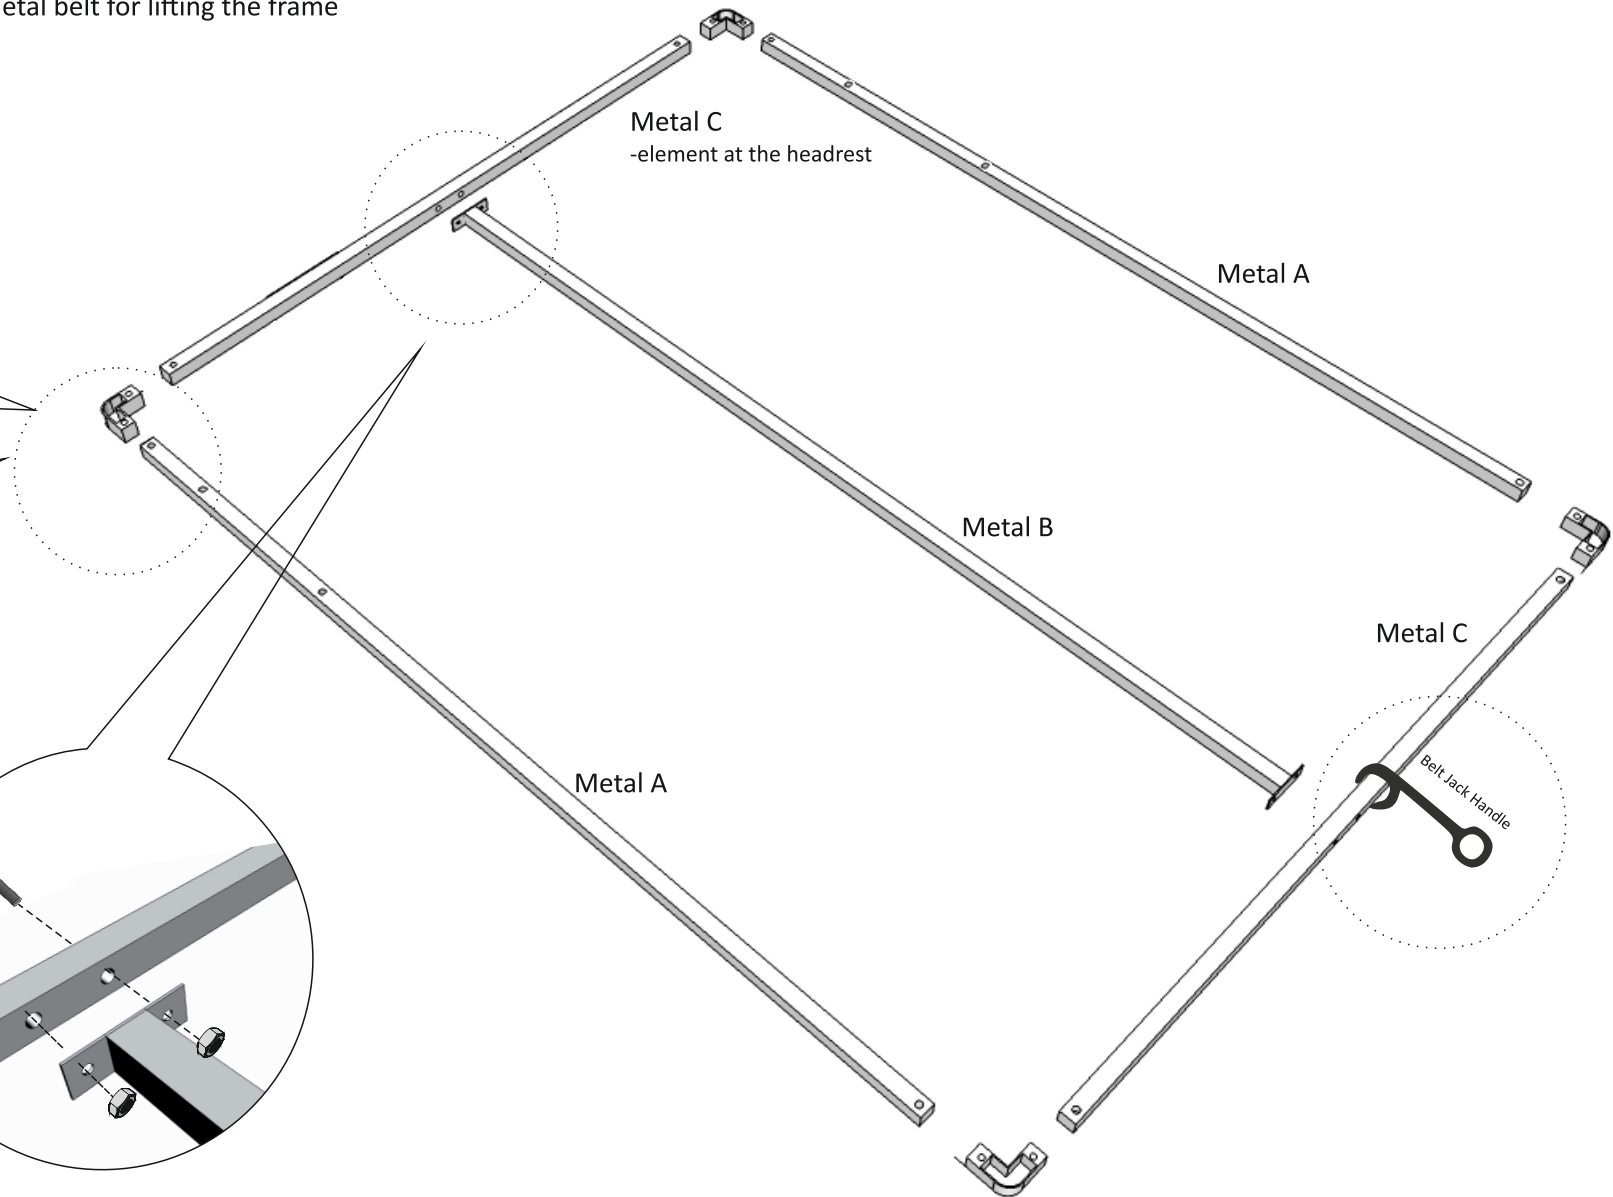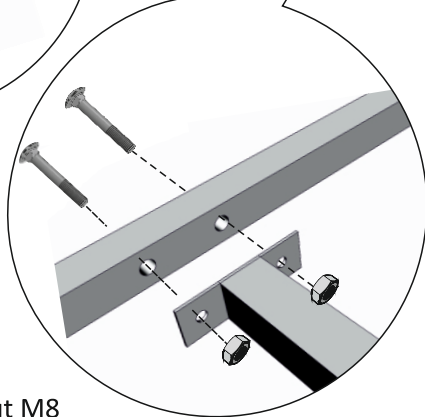


BOX B

Turn the stelage upside down


- 4** Click all plastic caps for middle bar (metal B) inside

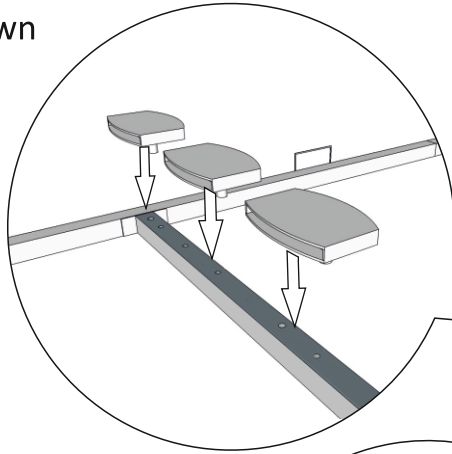


- 5** Insert the wooden slats into the plastic parts located on the central rail (B)

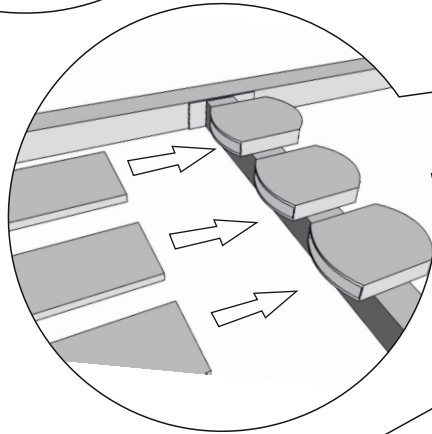


- 6** Press the previously connected elements into plastic caps

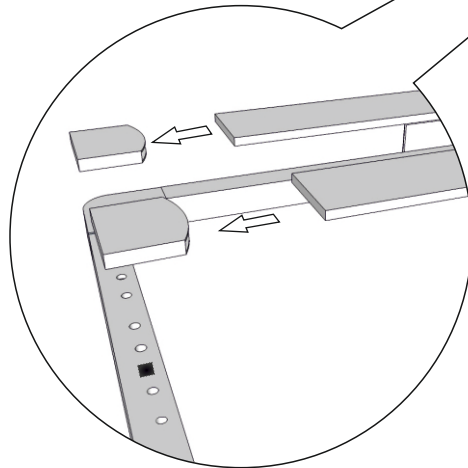


- 7** Press the other end of the wooden slats into the side metal rail (A)

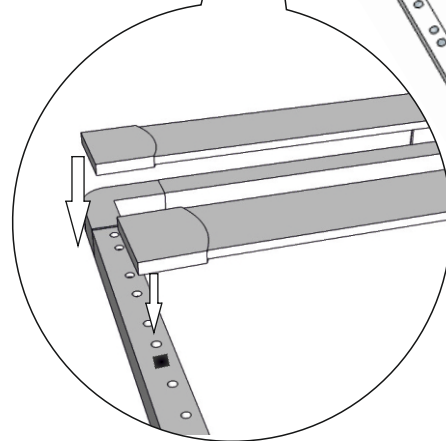

In the front part of the metal frame insert 2 handles and turn them to become a mattress stop

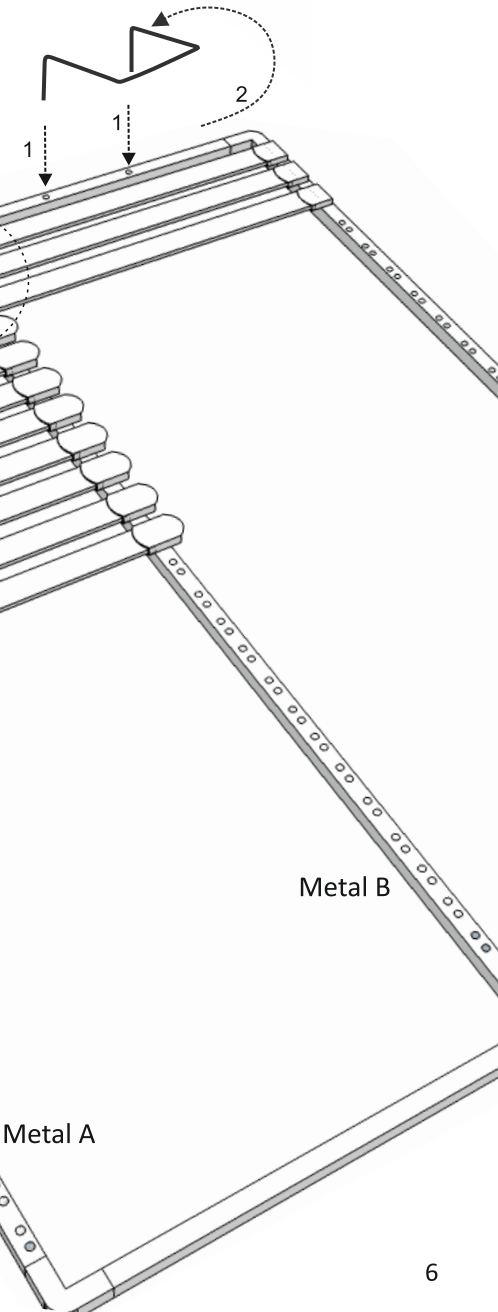


BOX A

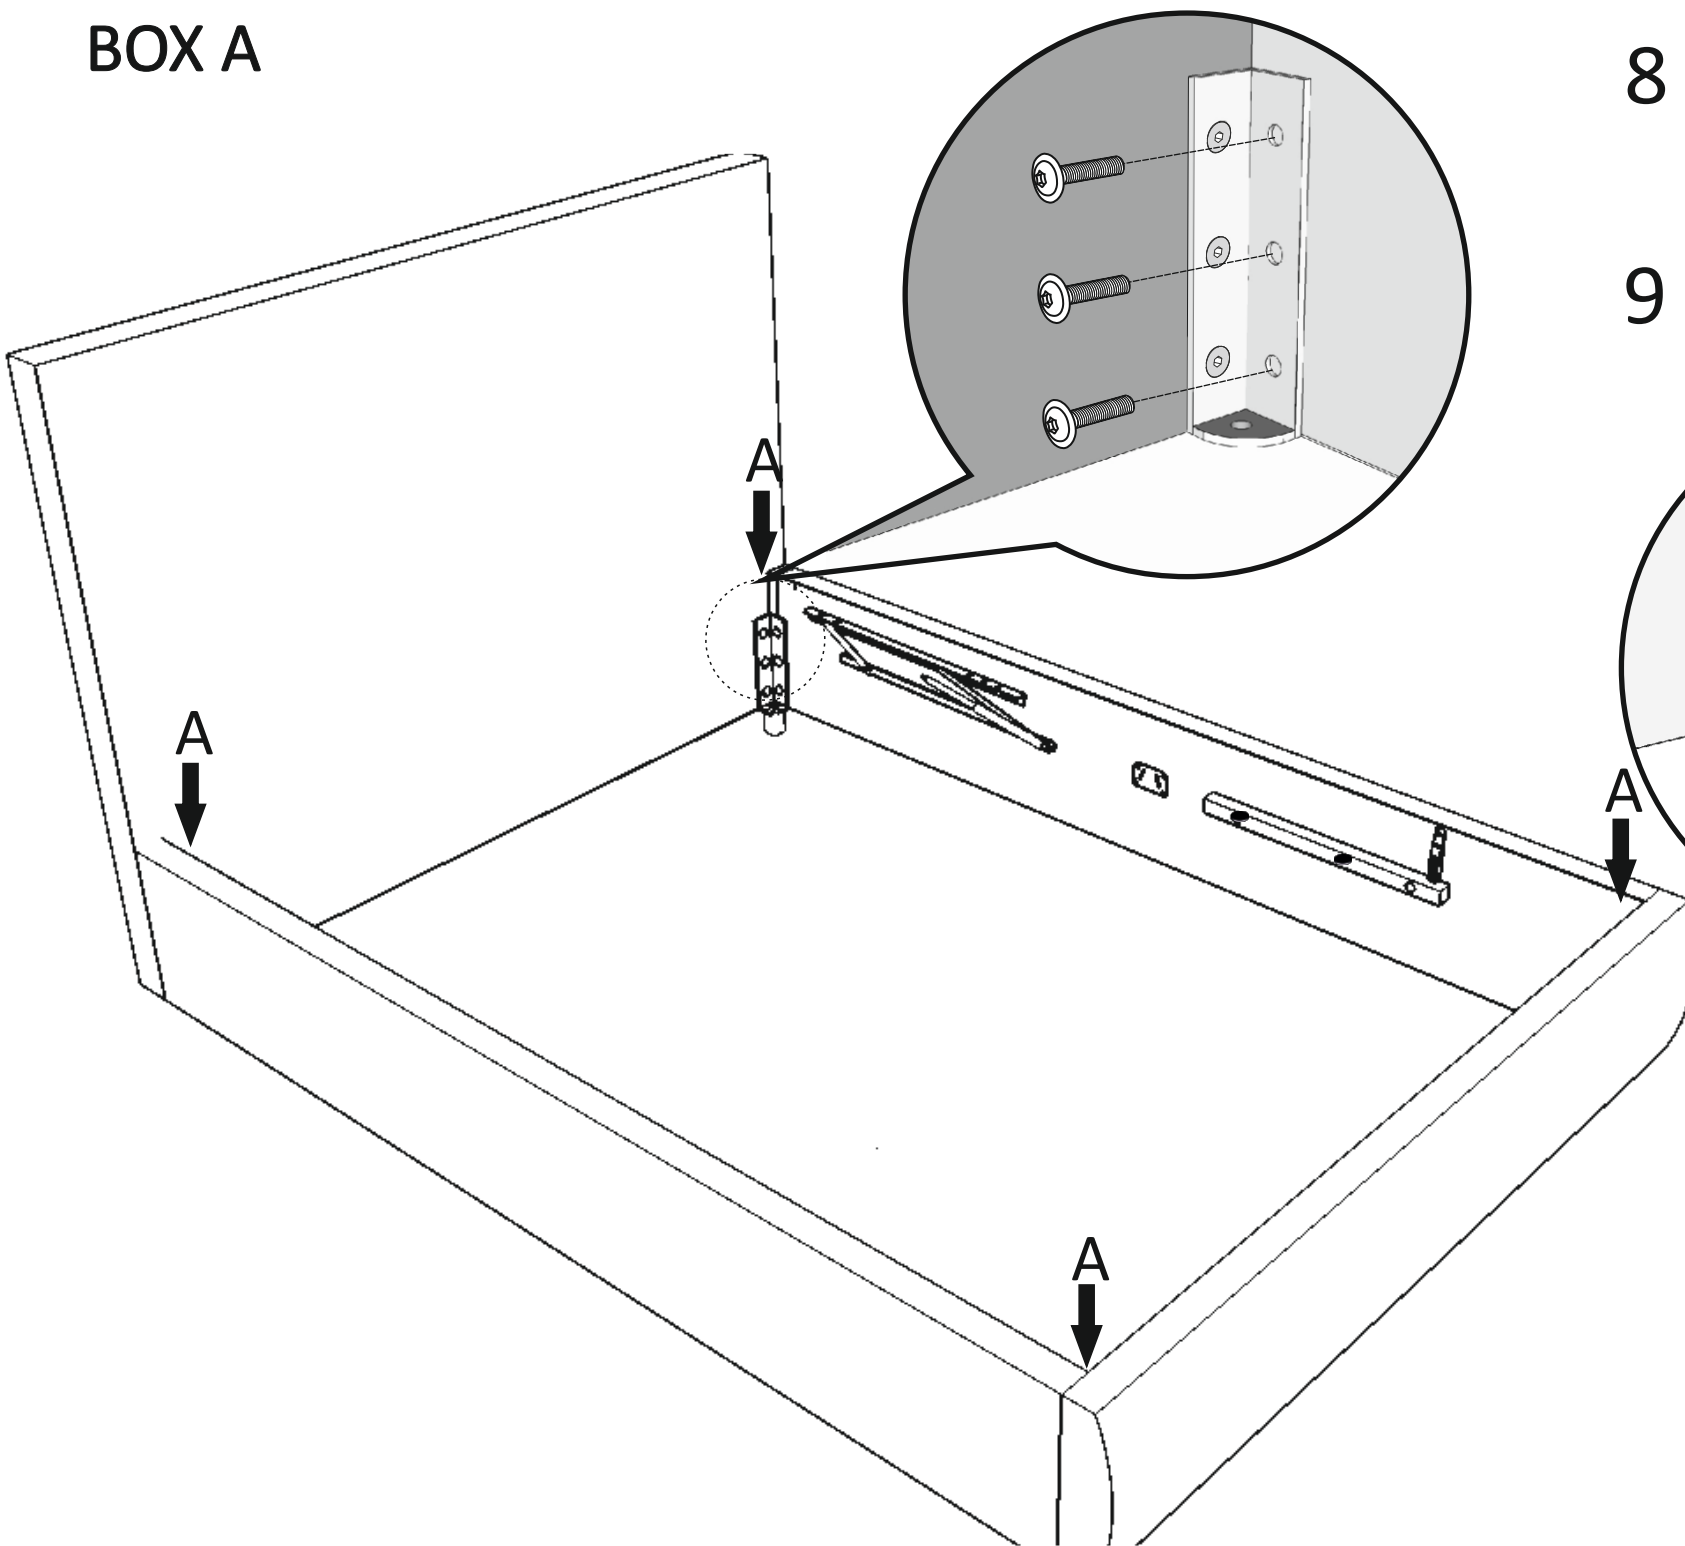

8 Connect all 4 corners with screws M8 30 mm to the sides of the bed with headboard and front panel (place of the corners marked with the letter A)


9 Attach the legs to the corner with nut and remember about bolt washer.

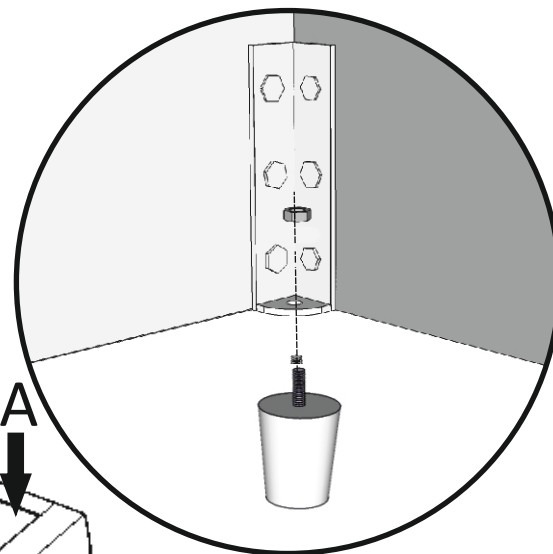


BOX A

10 Slide the center board into the metal piece

11 Stick felt on the bottom of the centre board and the metal trims (place of the felt marked with the letter B)

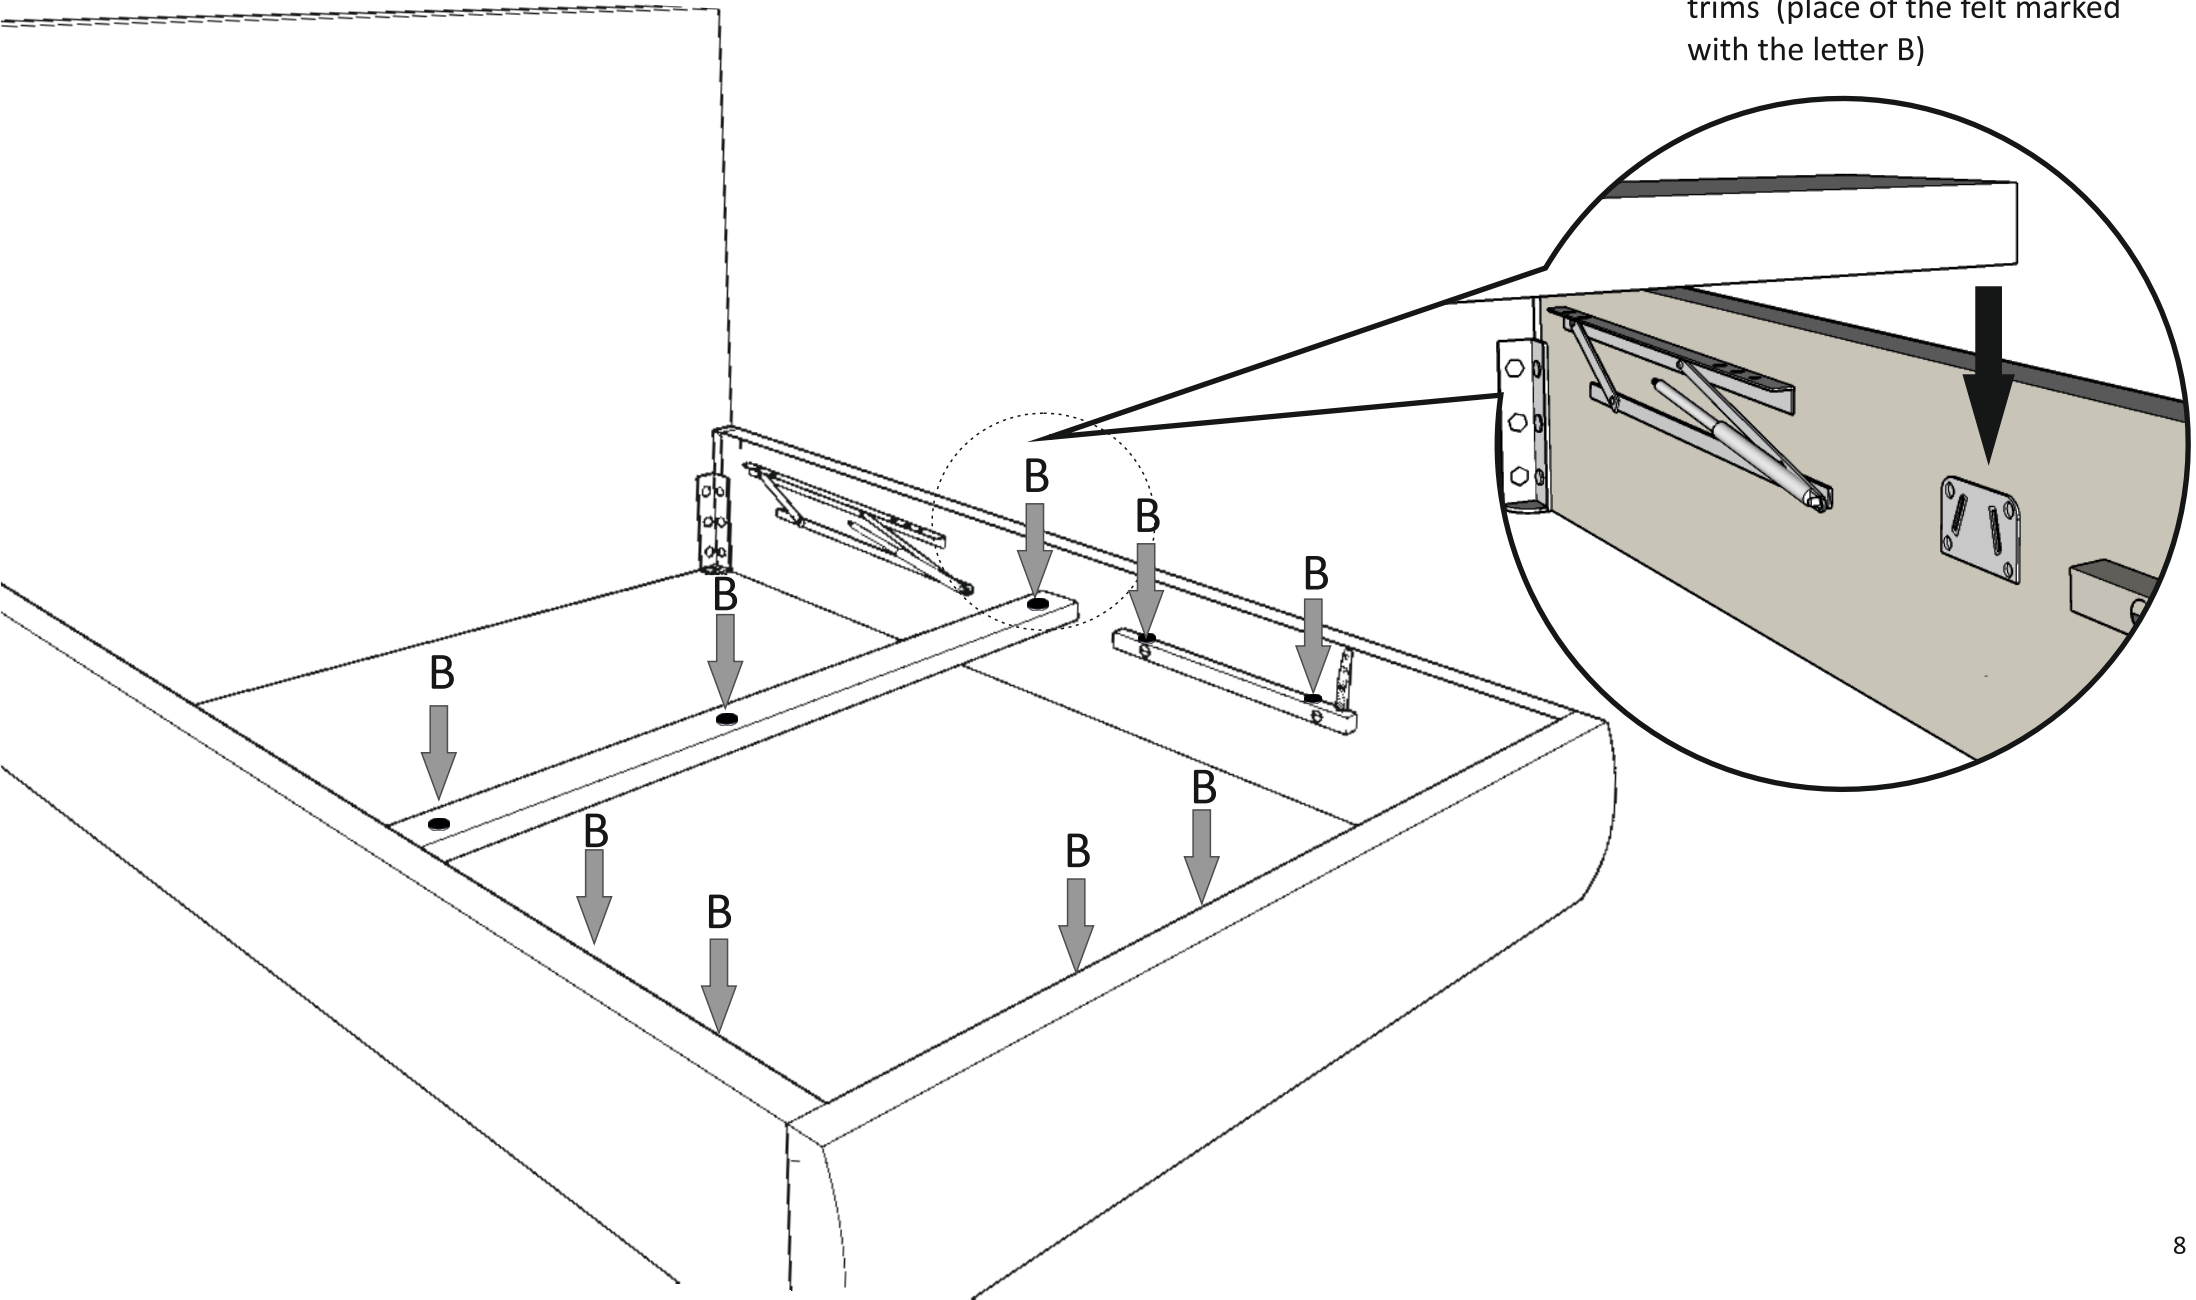





- 12** Cut the mount at the jack and unfold it. Attach the cylinder to the rest of the lift with the nut M6

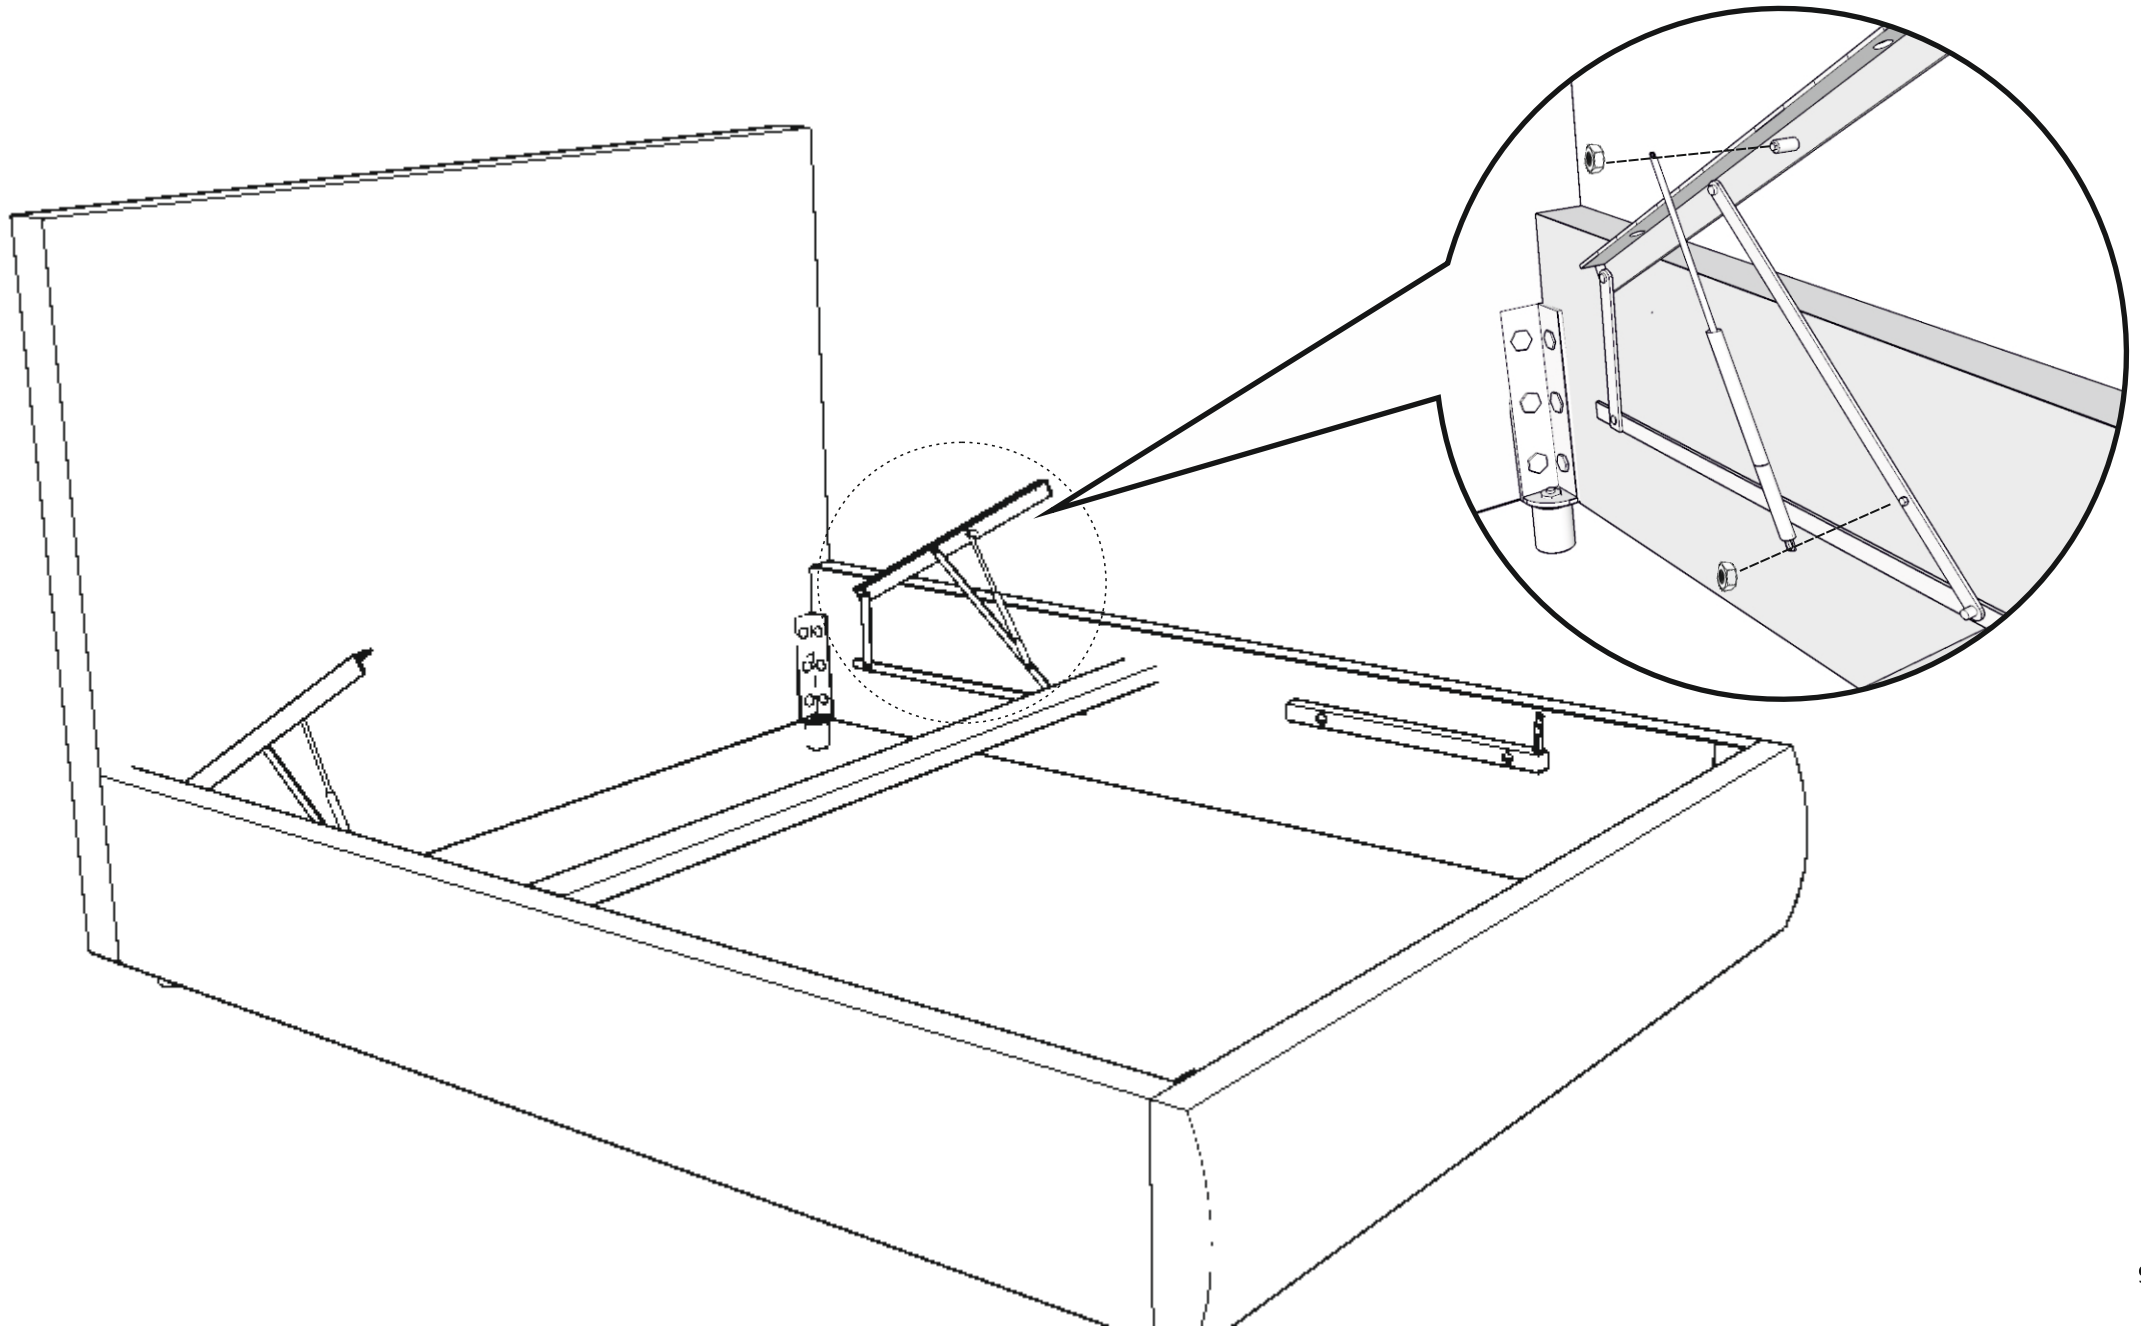

13 (A) Insert the two M8 55 mm screw securing the jack into the holes in the metal frame

(B) Lay the bed frame on the unfolded supports

(C) To the previously inserted M8 55 mm bolts. Tighten with a wrench

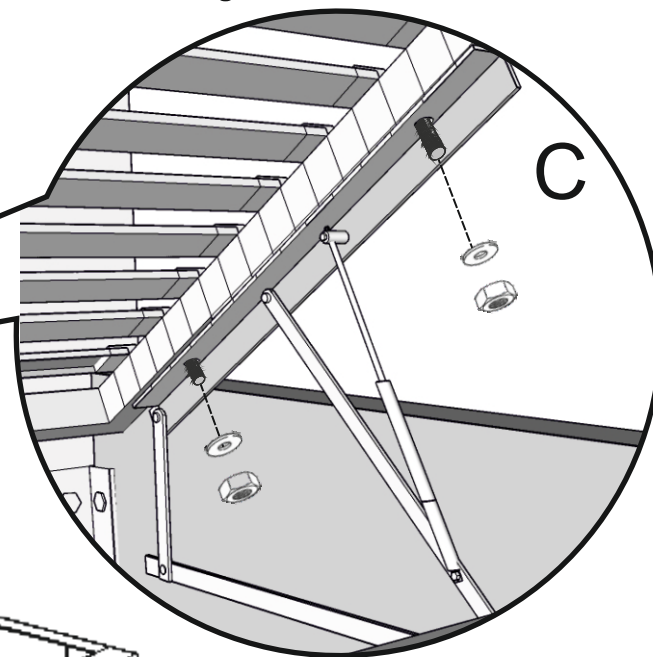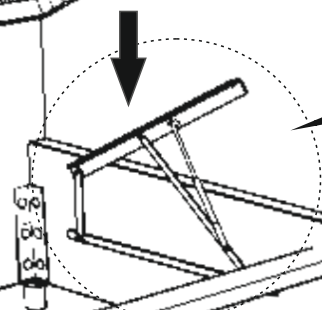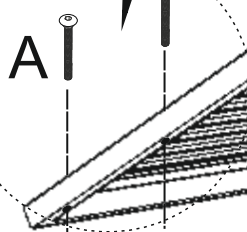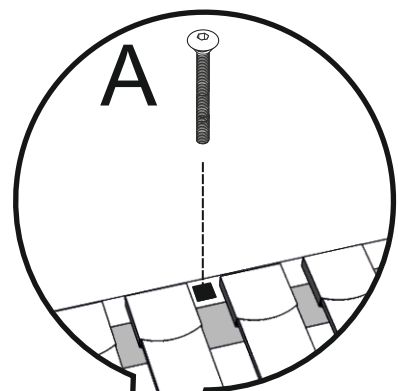


REMEMBER
to do it with minimum two persons

ATTENTION!

The frame without the mattress
rises to the top

For the **KIPLING** model,
the ears and headrest mounting accessories are located inside the
headrest. To take them out, you need to unzip both zippers.

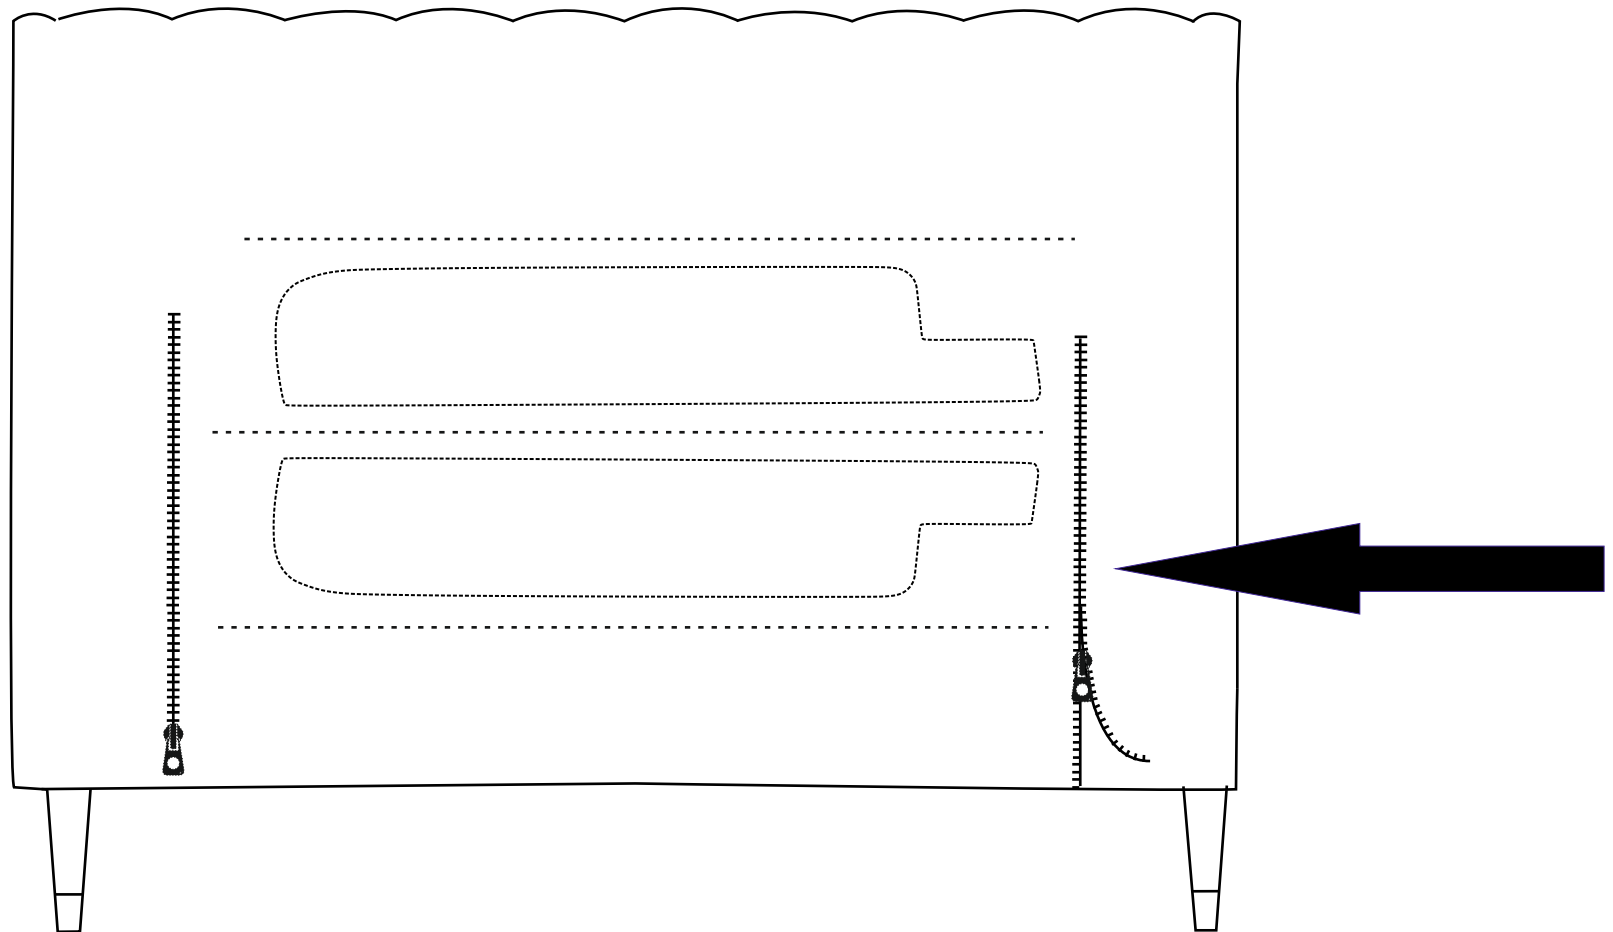

For the **KIPLING** model

After unzipping the zips, screw the "ears" to the headrest from the inside using 4 screws M8. Place a metal washer under the screw.

