

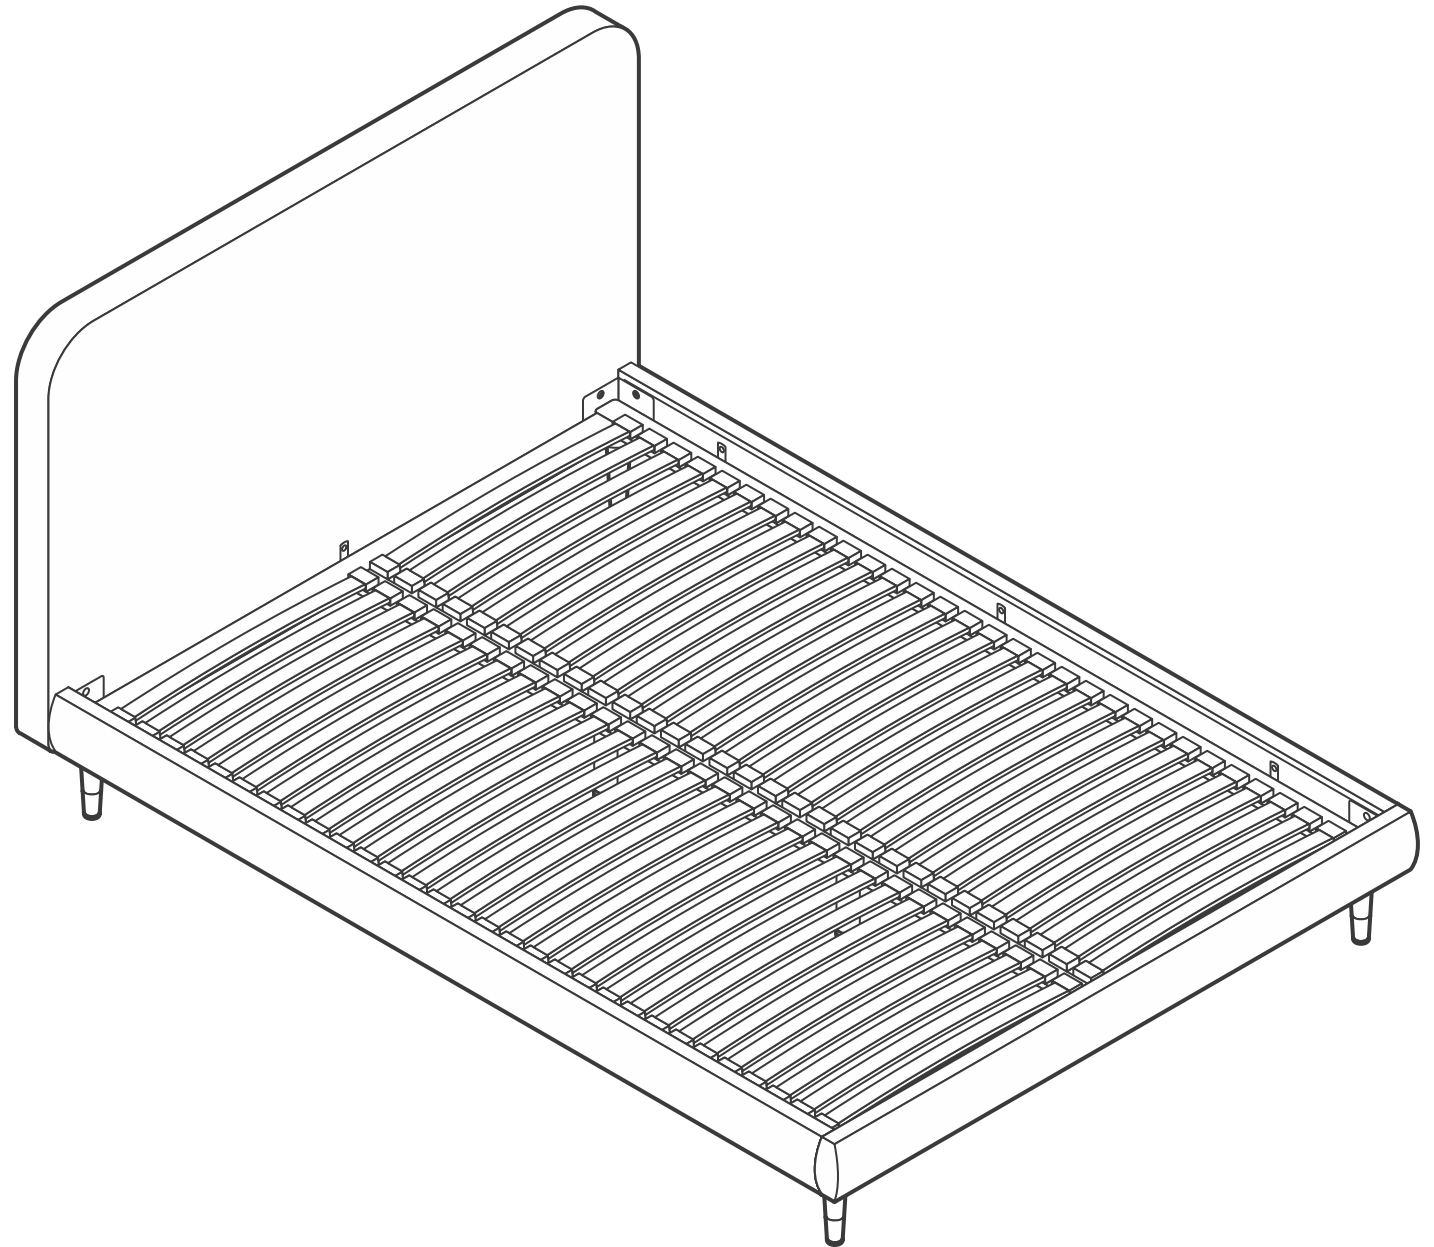


SIVOON

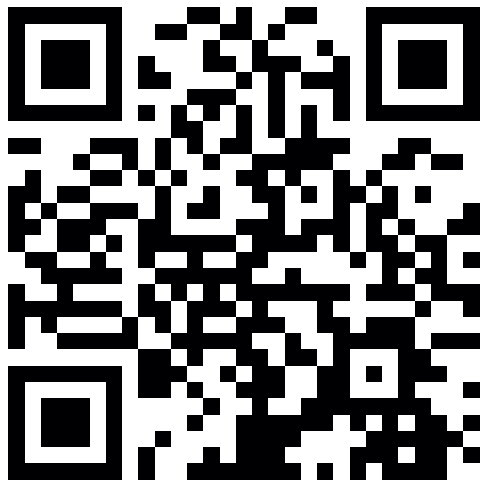


ASSEMBLED
NOTE: PLEASE ASSEMBLE ON MAT OR CARPET



Package A / headboard

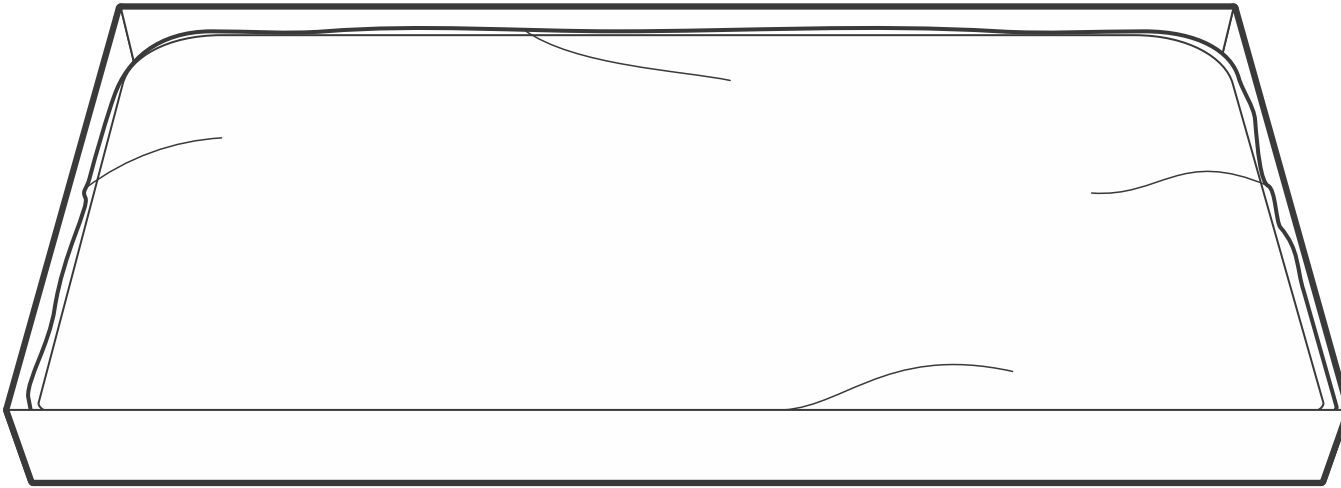


Tools included (in Package 1)

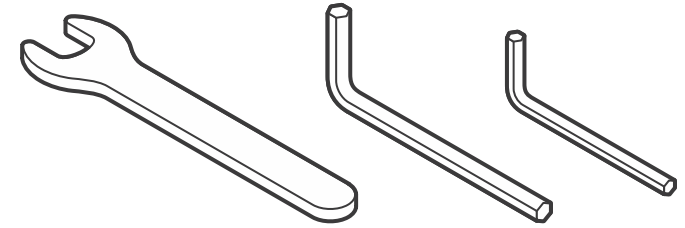

Tools needed



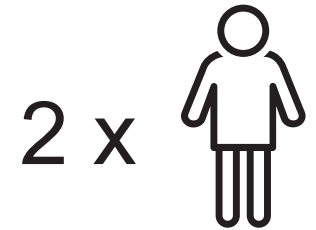
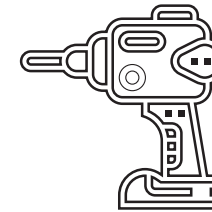


Package B / frame

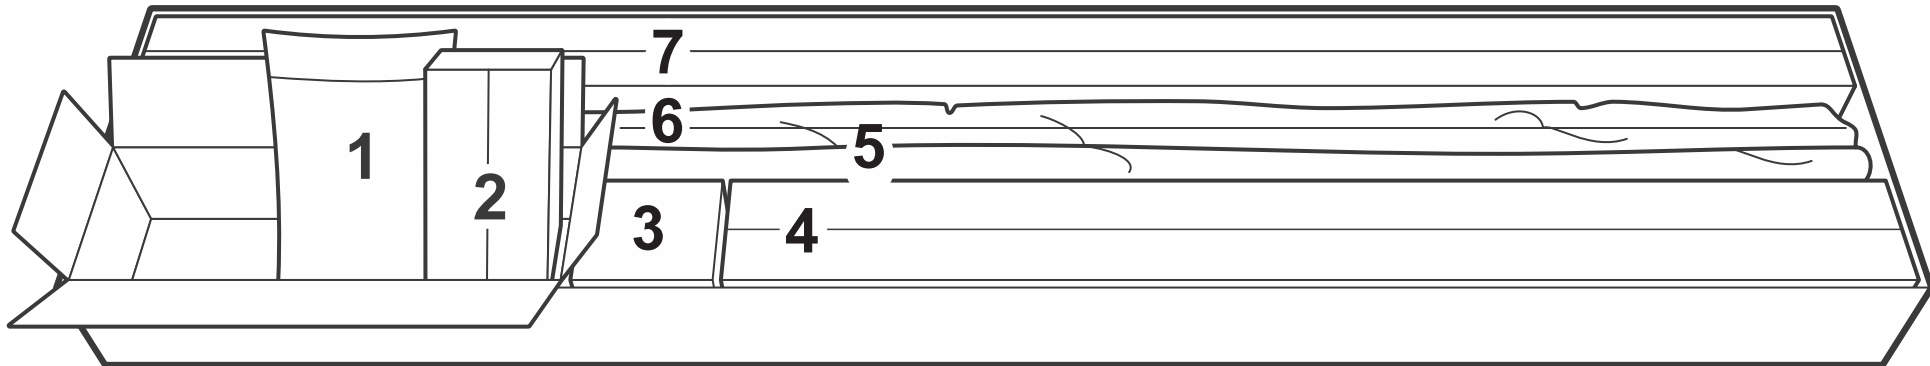

1. Do not fully tighten the screws when connecting the individual components. Do this when all elements are connected
2. Be careful not to soil the upholstered parts of the bed. All bolts are coated with grease. Make sure that the surface you are working on is clean
3. For the **KIPLING** model, the ears and headrest mounting accessories are located in the headrest. To take them out, you need to unzip the zipper.


Package 1

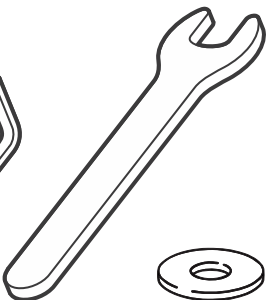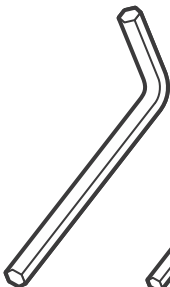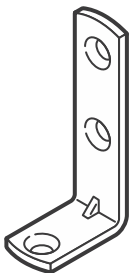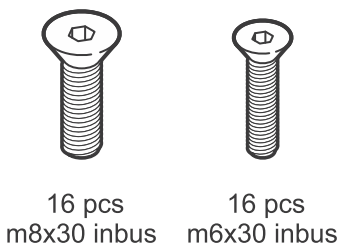


Package 2




Package 5

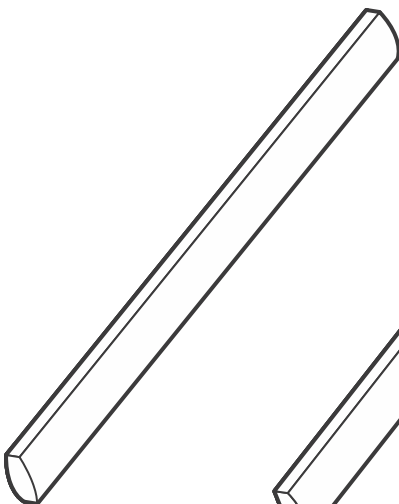


Package 6

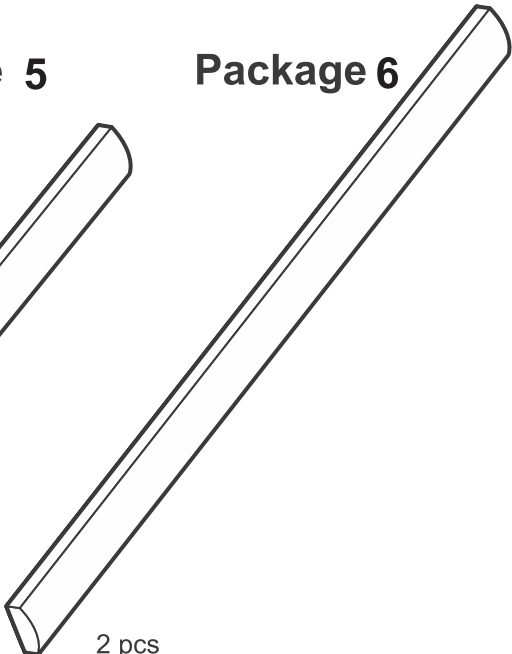





Package 3

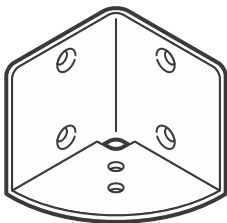


Package 4




Package 7

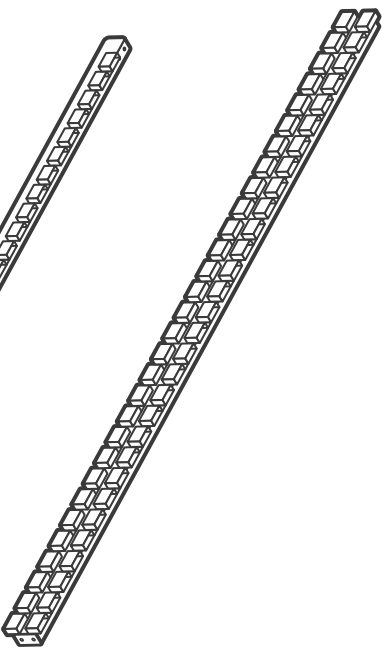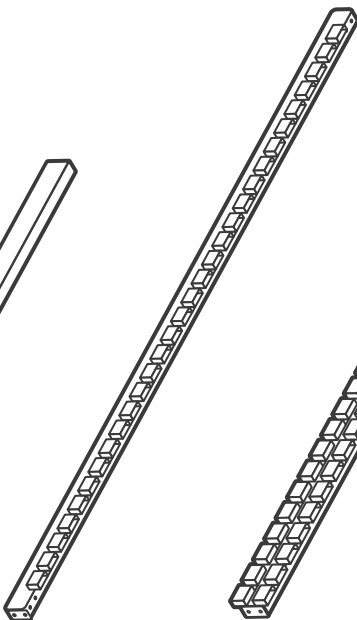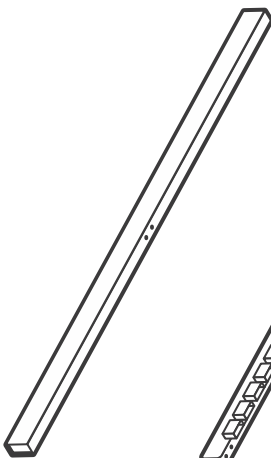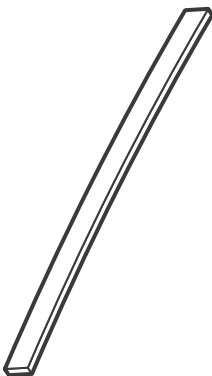


Assembly slat frame /
Package 1+5+8

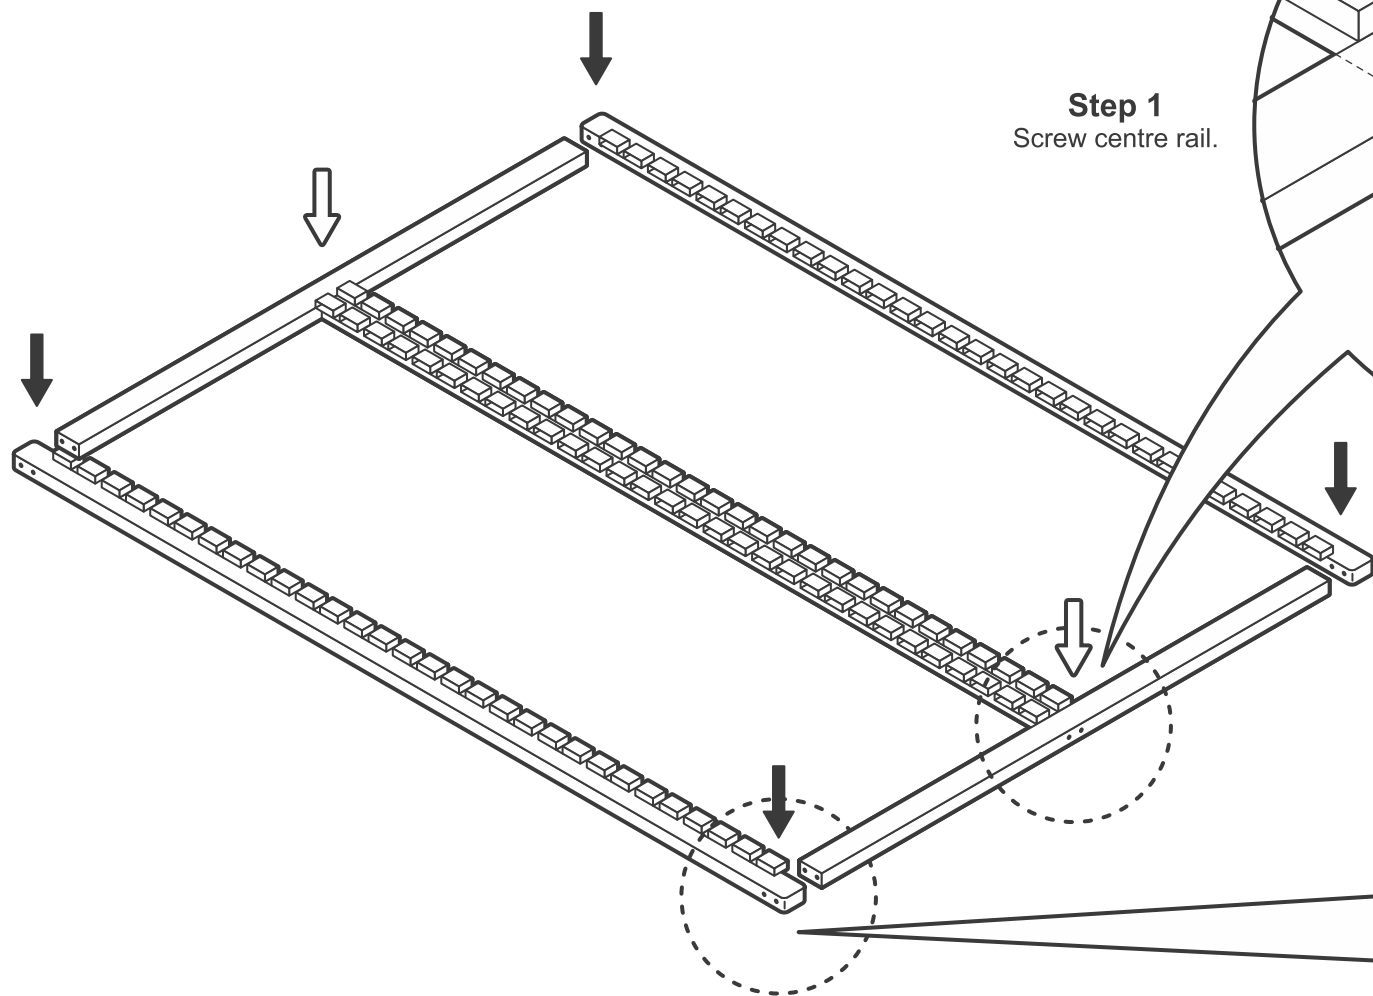


Step 1
Screw centre rail.

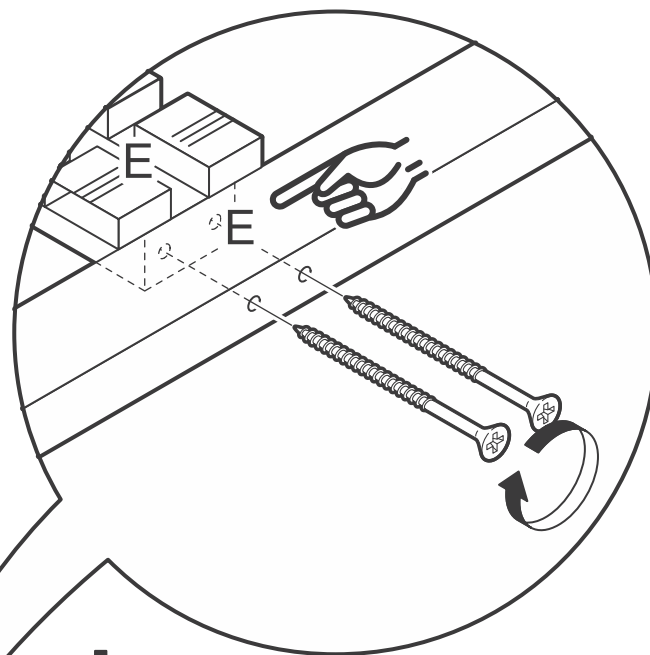


Step 2
Partially screw
in side rail
all 4 corners.

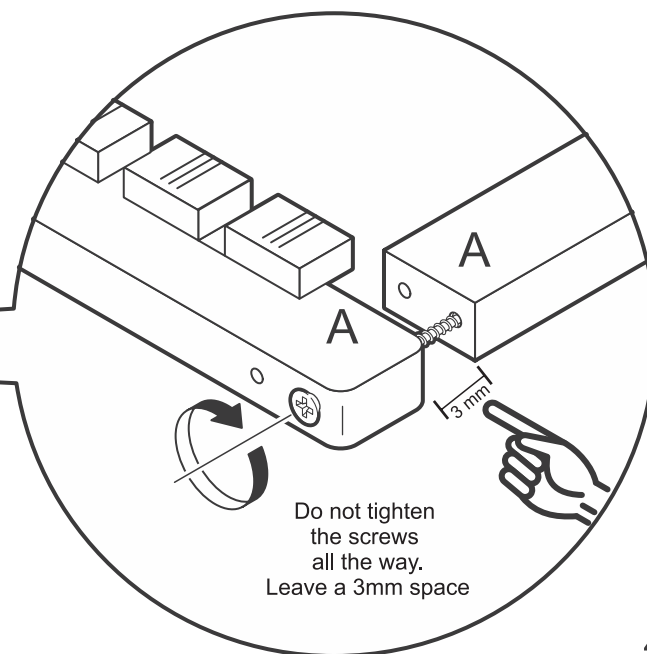


Assembly slat frame /
Package 1+5+8

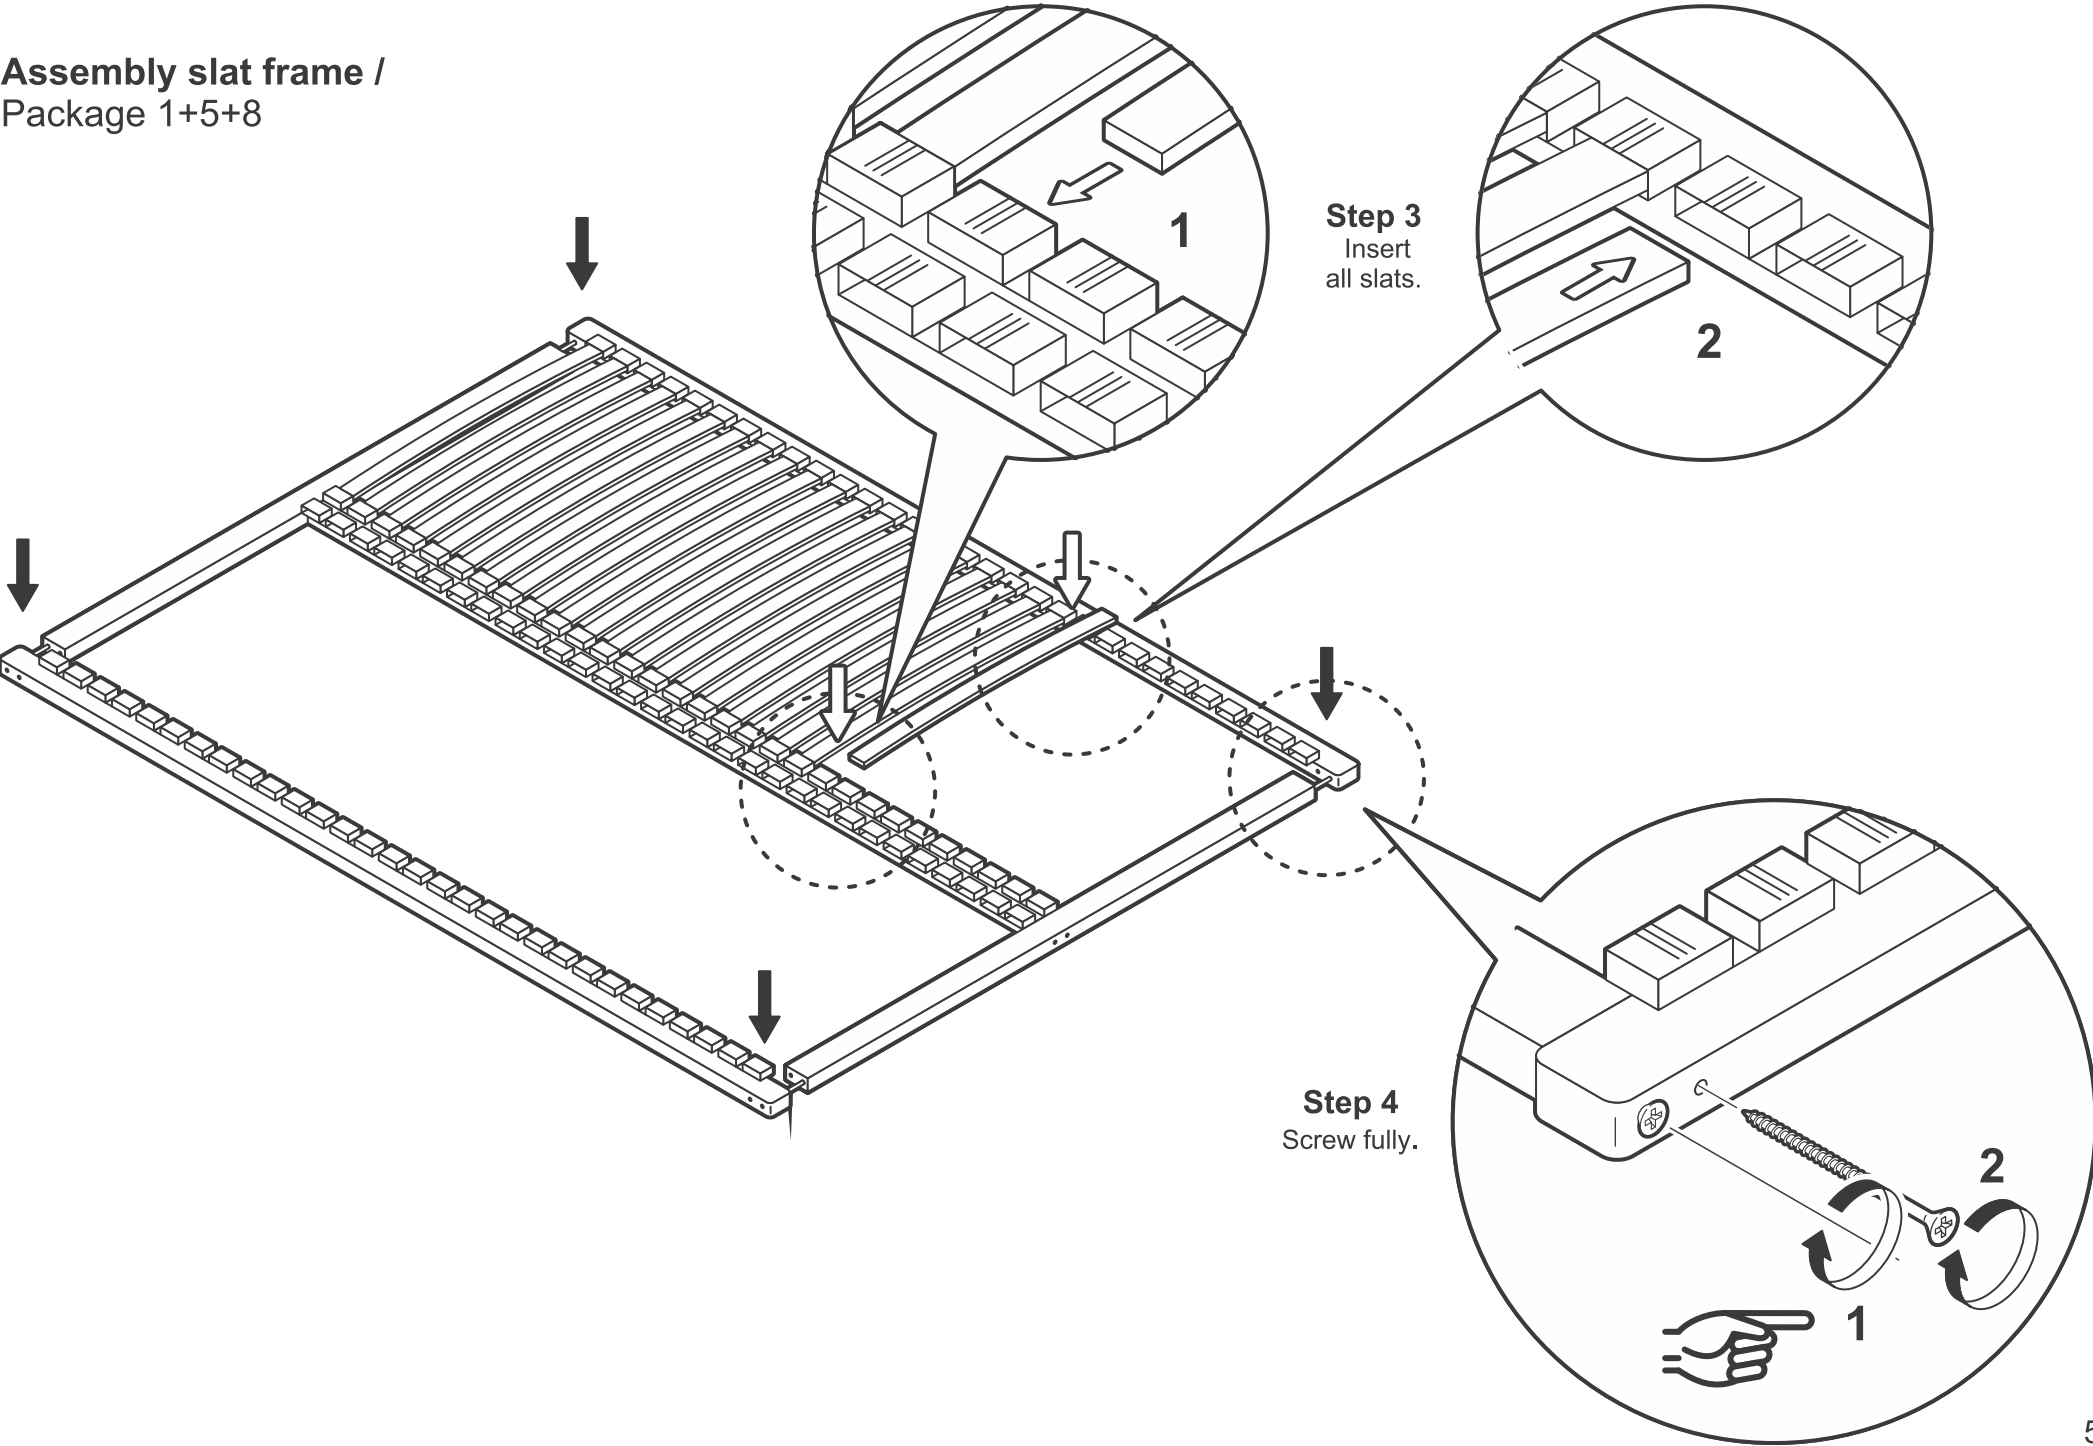


Assembly upholstered frame /
Package 1+2+3+4+6+7 + Package A

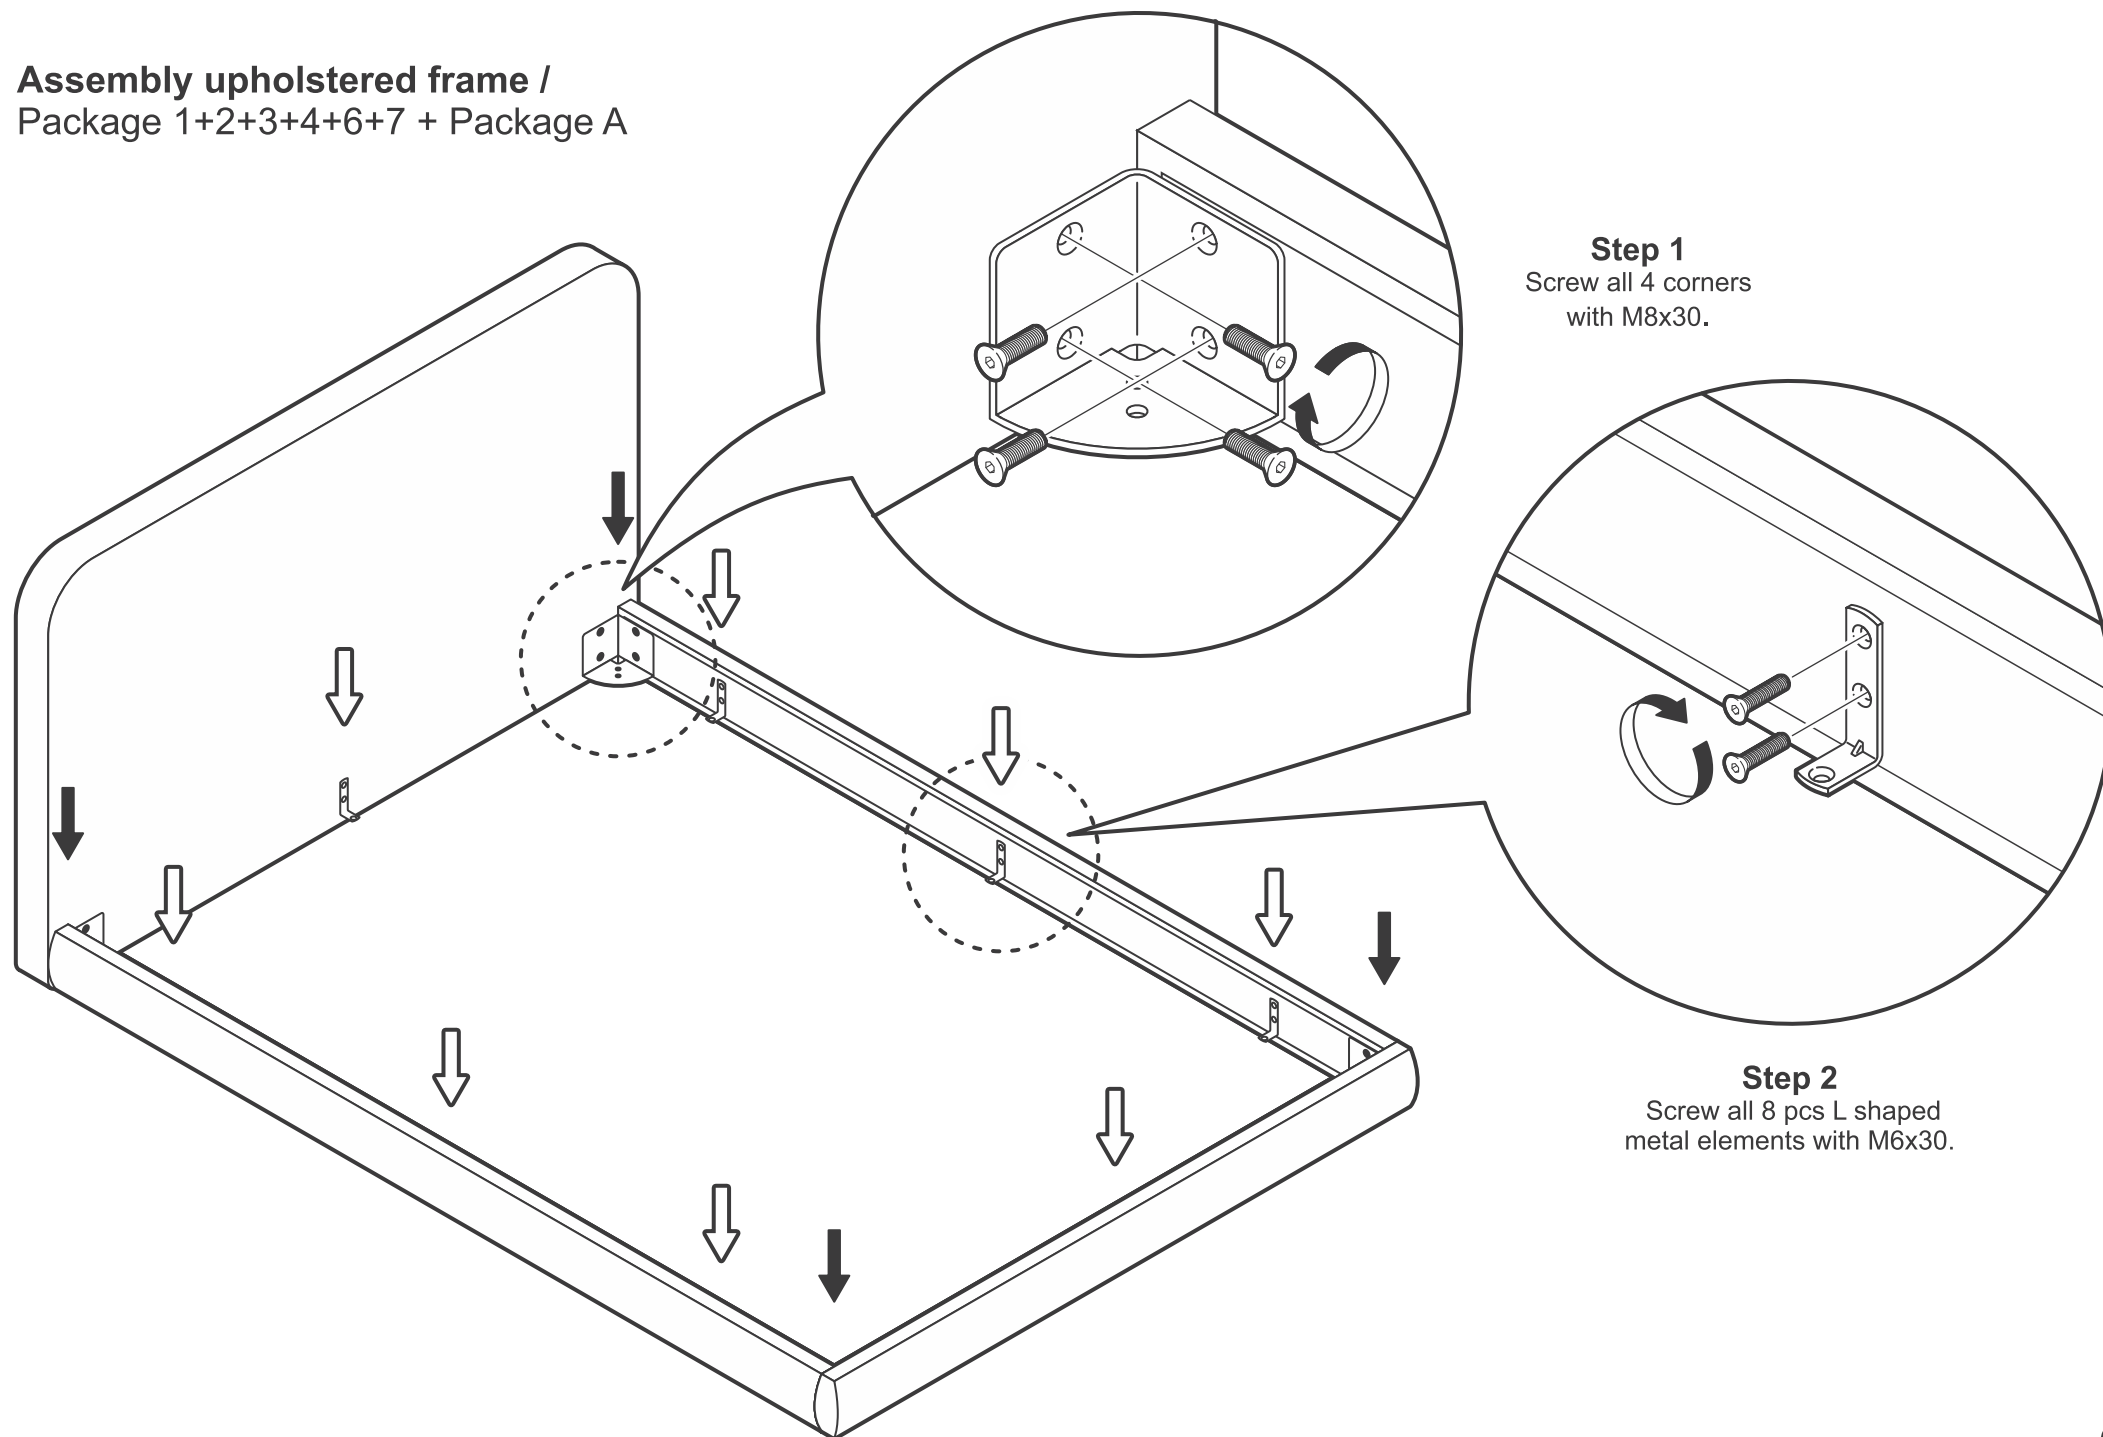


Assembly upholstered frame /
Package 1+2+3+4+6+7 + Package A

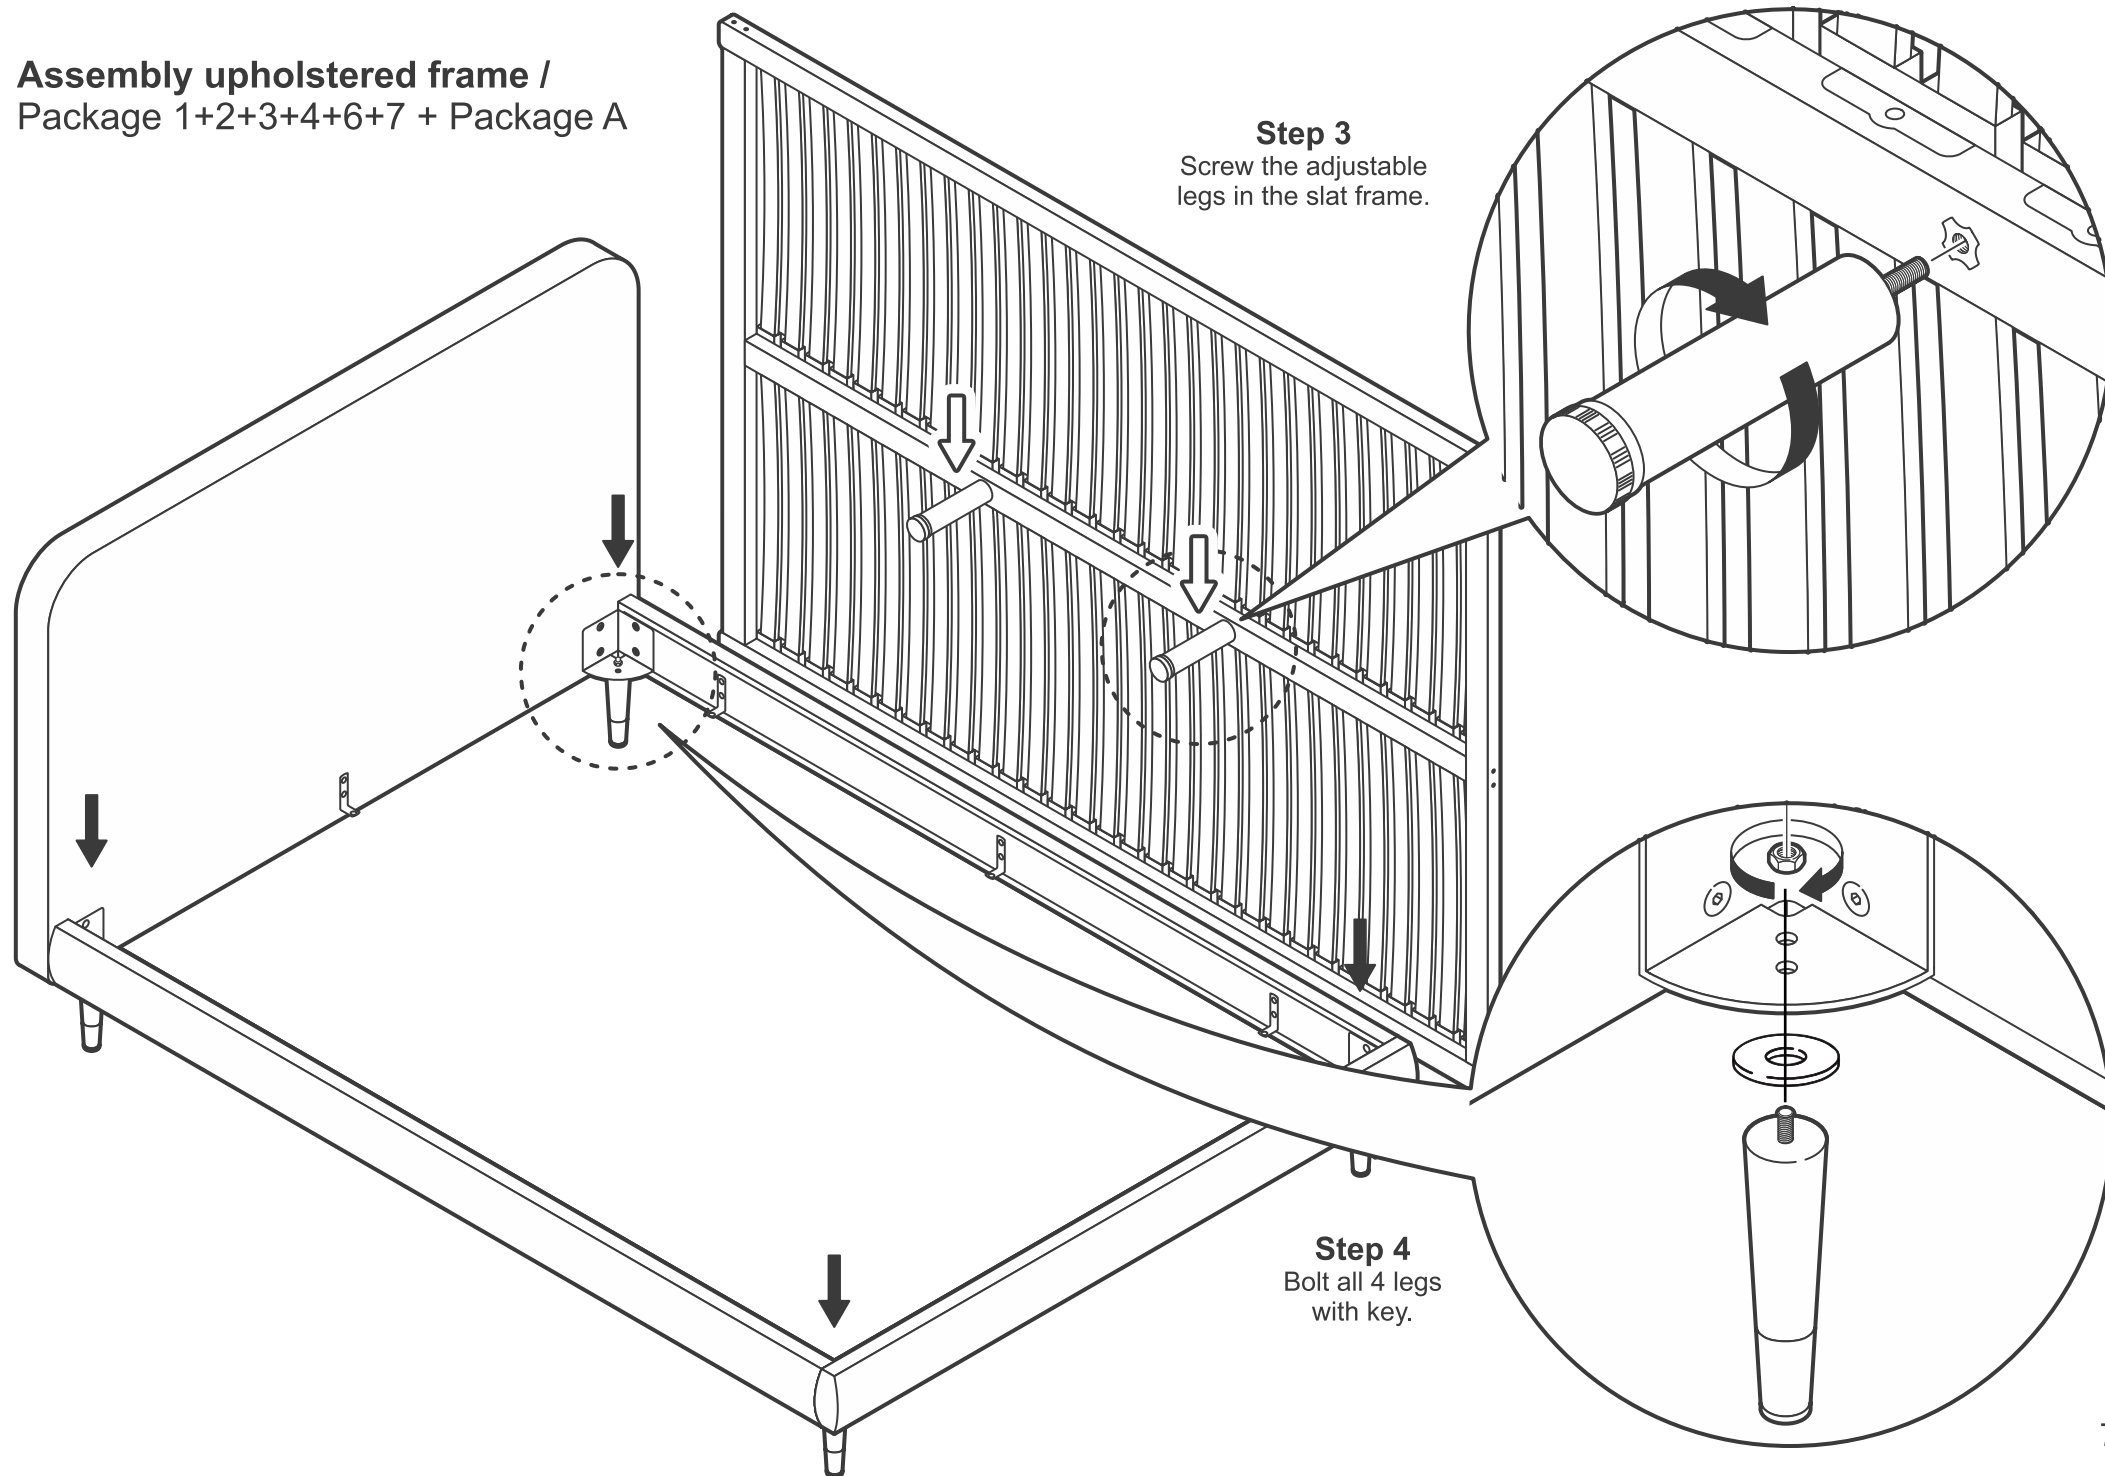


Assembly upholstered frame /
Package 1+2+3+4+6+7 + Package A

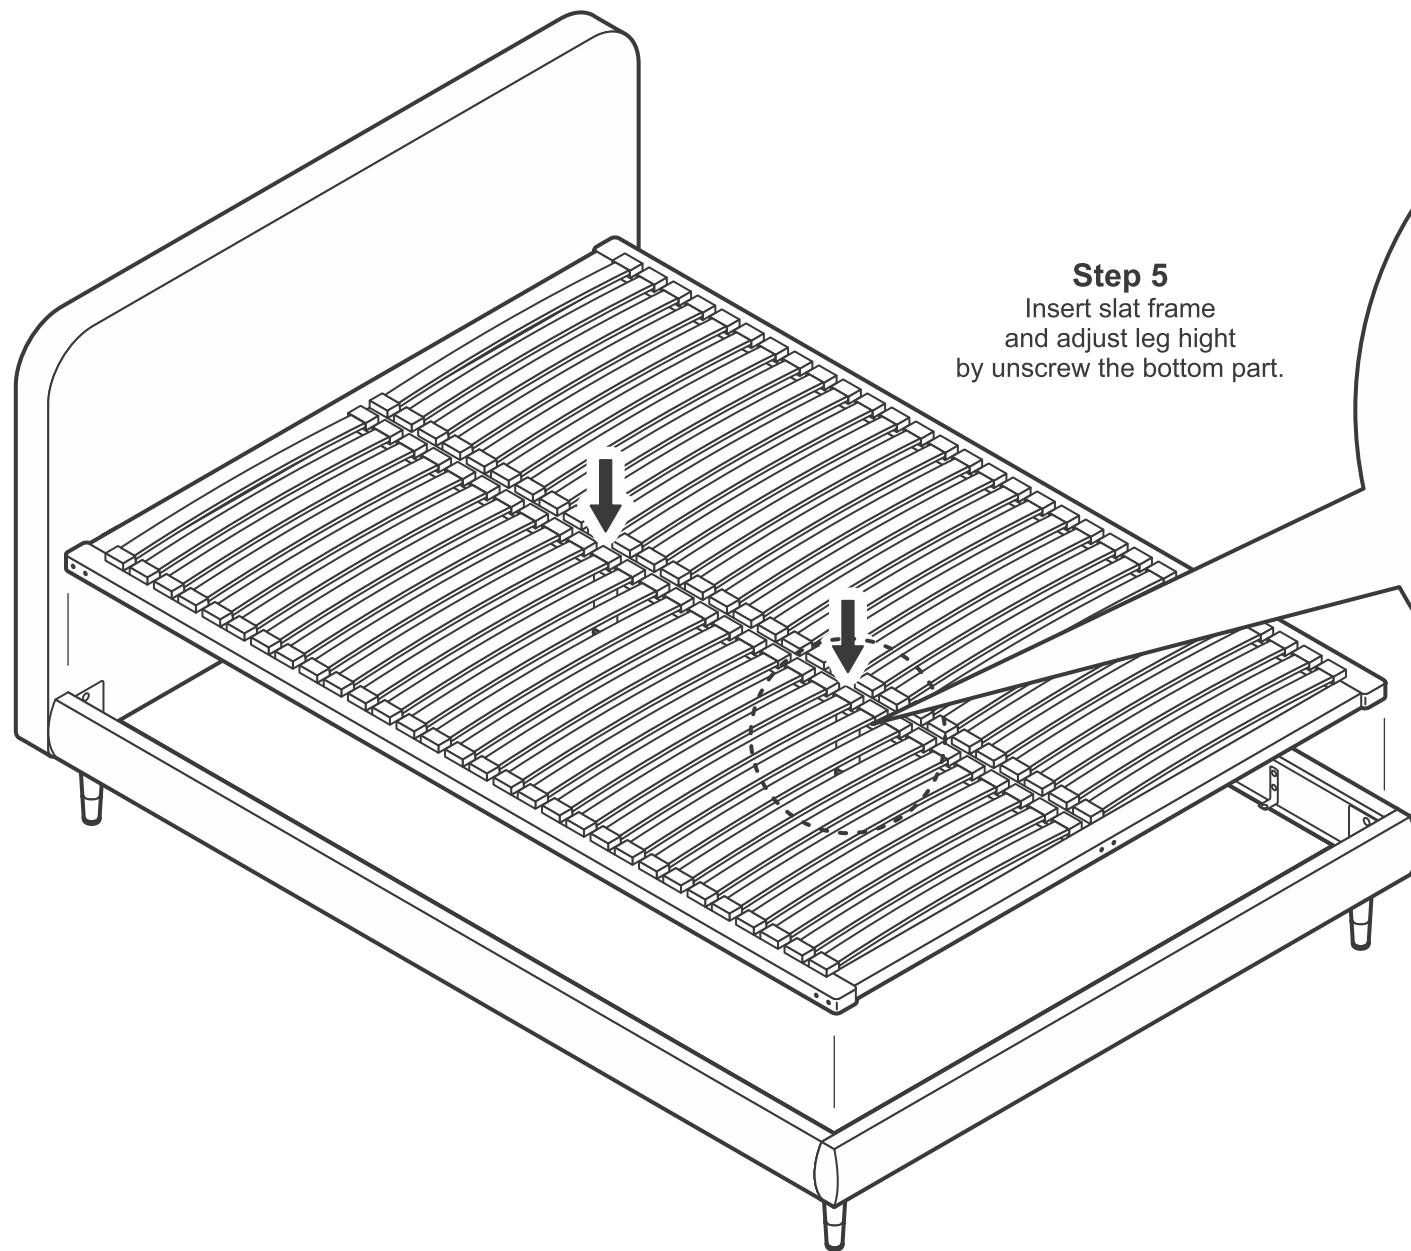

Step 5
Insert slat frame
and adjust leg height
by unscrew the bottom part.

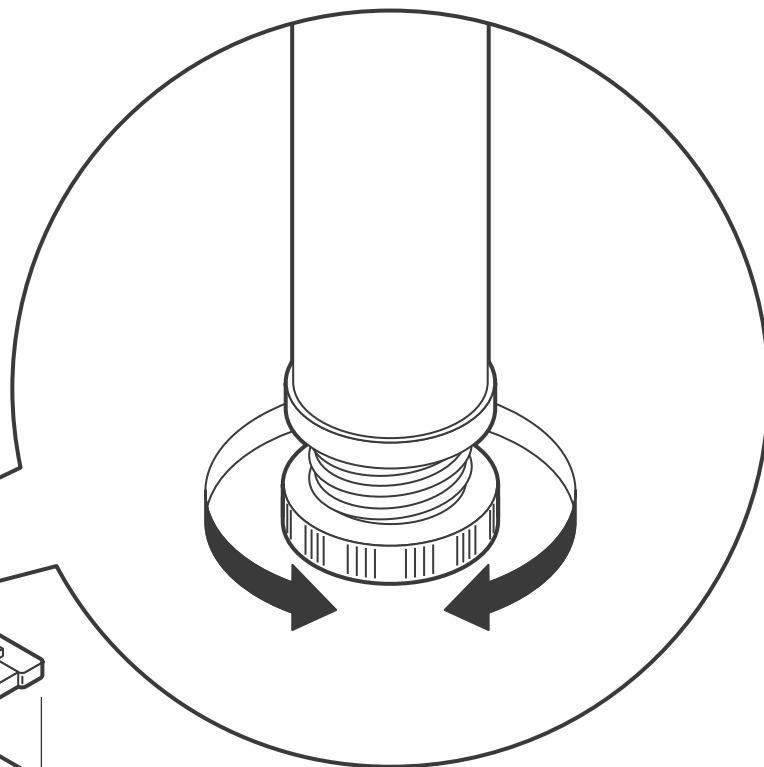

For the **KIPLING** model,
the ears and headrest mounting accessories are located inside the
headrest. To take them out, you need to unzip both zippers.

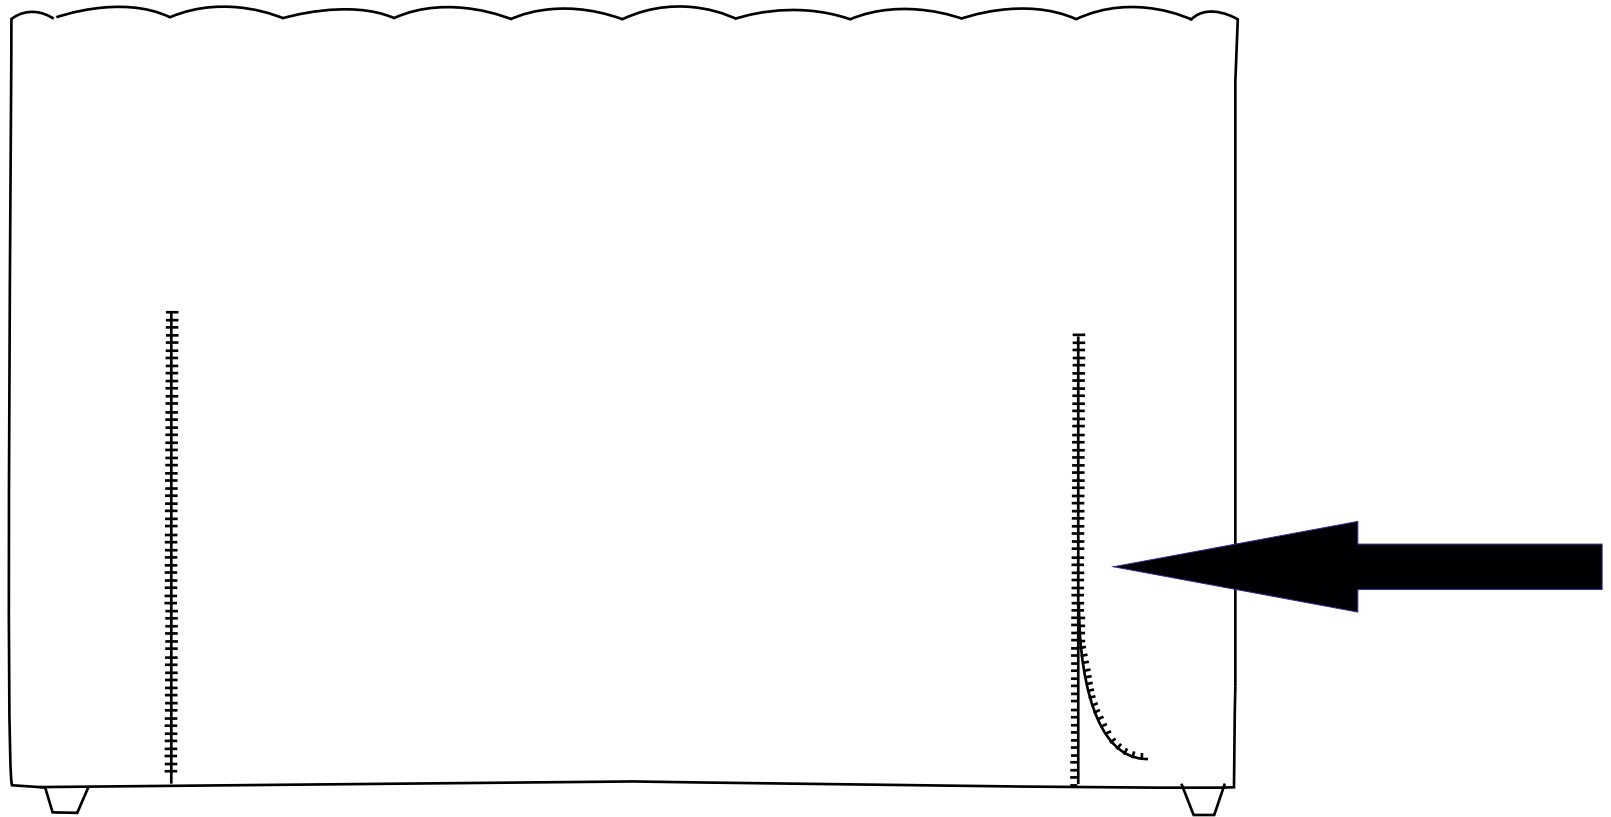

For the **KIPLING** model

After unzipping the zips, screw the "ears" to the headrest from the inside using 4 screws M8. Place a metal washer under the screw.

